

Inseego Wavemaker™ PRO 5G Outdoor CPE FW2000e



INSEEGO COPYRIGHT STATEMENT

© 2022 Inseego Corp. All rights reserved. Complying with all copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose without the expressed written permission of Inseego Corp.

SOFTWARE LICENSE

Proprietary Rights Provisions:

Any software drivers provided with this product are copyrighted by Inseego Corp. and/or Inseego Corp.'s suppliers. Although copyrighted, the software drivers are unpublished and embody valuable trade secrets proprietary to Inseego Corp. and/or Inseego Corp. suppliers. The disassembly, decompilation, and/or Reverse Engineering of the software drivers for any purpose is strictly prohibited by international law. The copying of the software drivers, except for a reasonable number of back-up copies is strictly prohibited by international law. It is forbidden by international law to provide access to the software drivers to any person for any purpose other than processing the internal data for the intended use of the software drivers.

U.S. Government Restricted Rights Clause:

The software drivers are classified as "Commercial Computing device Software" and the U.S. Government is acquiring only "Restricted Rights" in the software drivers and their Documentation.

U.S. Government Export Administration Act Compliance Clause:

It is forbidden by US law to export, license or otherwise transfer the software drivers or Derivative Works to any country where such transfer is prohibited by the United States Export Administration Act, or any successor legislation, or in violation of the laws of any other country.

TRADEMARKS AND SERVICE MARKS

Inseego Corp. is a trademark of Inseego Corp., and the other trademarks, logos, and service marks (collectively the "Trademarks") used in this user manual are the property of Inseego Corp. or their respective owners. Nothing contained in this user manual should be construed as granting by implication, estoppel, or otherwise, a license or right of use of Inseego Corp. or any other Trademark displayed in this user manual without the written permission of Inseego Corp. or its respective owners.

- MiFi® and the MiFi logo are registered trademarks of Inseego Corp.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

The names of actual companies and products mentioned in this user manual may be the trademarks of their respective owners.

Document Number: 14945406 Rev 6

Contents

Introduction and Getting Started	5
Overview	6
Key Features	6
System Requirements	6
Getting Started	7
Configuration	8
Overview	9
Home Page	10
Side Menu	10
Header Icons	11
Getting Help	11
Admin Password	12
Changing the Admin Password	12
Managing Data Usage	13
Data Usage Page	14
Managing Settings	16
Preferences Tab	16
Software Update Tab	17
Backup and Restore Tab	19
SIM Manager Tab	21
APN Tab	25
Advanced Tab	28
Viewing Info About the FW2000e	43
Internet Status Tab	44
Internet Sessions Tab	46
Diagnostics Tab	47
Device Info Tab	48
GPS Tab	49
Logs Tab	50
Getting Support	51
Customer Support Page	51
Troubleshooting and Support	52
Overview	53
Replacing your SIM Card	53
Indicator LED	55
Common Problems and Solutions	56
Indicator LED is blue and SIM appears active, but I cannot browse the internet	56
My connecting device is not obtaining a valid IP address	56
I cannot access the Admin Web UI	56
Resetting your Device	58
Resetting with the RESET Button	58
Resetting from the Insego Mobile App	59
Resetting from the Admin Web UI	59
Resetting from Insego Connect	59
Setting up CBRS	60
Technical Support	62
Product Specifications and Regulatory Information	63
Product Specifications	64
Device	64
Environmental	64
Network Connectivity	65

Security.....65
Regulatory Information.....66
Product Certifications and Supplier’s Declarations of Conformity.....69
Energy Efficiency.....69
Wireless Communications.....69
Limited Warranty and Liability.....71
Safety Hazards72
Glossary73
Glossary74

1

Introduction and Getting Started

Overview
Getting Started

Overview

The Inseego Wavemaker PRO 5G Outdoor CPE FW2000e is the next-gen CPE solution that brings wireless 5G data speeds to urban, suburban, and rural customers alike. The FW2000e delivers high-speed data over both 5G and 4G LTE networks using a proprietary high-gain antenna array. The FW2000e connects to the best cellular network and provides data connectivity to the existing in-building network.

Inseego recommends that FW2000e be installed by professional technicians to assure optimal antenna orientation and performance.

Key Features

- Sophisticated antenna array delivers up to 14dbi gain to achieve longer range and higher all-around data throughput at all distances*.
- Designed to operate in extreme temperatures from -30°C to 70°C (-22 to 158°F) and has an environmental rating of IP67 for water and dust ingress.
- Advanced networking features including a built-in firewall, DMZ, IP Passthrough and more. Enterprise customers can also subscribe to Inseego Secure™ for an additional layer of end-to-end security features, threat identification, monitoring and alerts.
- Remote management with the Inseego Connect™ platform enables remote device management, diagnostics, performance monitoring, alerts, and much more.
- Inseego Mobile™ App, available on Apple and GooglePlay App stores, guides installers to find the best location for performance, and enables consumers to manage device settings with their smartphone.
- Support for up to two carrier SIMs and auto switching between carriers. Multi-carrier firmware allows the FW2000e to be used on most major global carriers.

System Requirements

Admin Web UI operating systems supported include:

- Windows 10 and later
- MacOS 10.14 and later
- Linux® Ubuntu 18.04 LTS and later

* Data plan required. Coverage and speeds subject to network availability.

Getting Started

To turn on your FW2000e and connect a device:

1. Check that the PoE cable from the FW2000e is in the **Data & Power Out** port on the PoE power injector and the PoE power injector is plugged into an earthed AC outlet.



2. Insert one end of a Cat6A Ethernet cable into the **Data In** port on the PoE power injector.
3. Insert the other end of the cable into the Ethernet port of the device you wish to connect.
NOTE: Any time you switch the device you are connecting to the FW2000e, you must first disconnect the existing connected device and power cycle the FW2000e before connecting the new device.

WARNING! Use only the PoE power injector supplied with the FW2000e. Unapproved power supplies could cause overheating or fires, resulting in serious bodily injury, death, or property damage. Do not defeat the safety purpose of a grounding-type plug. Use the PoE power injector only in combination with an earth-socked outlet.

2

Configuration

Overview

Admin Password

Managing Data Usage

Managing Settings

Viewing Info About the FW2000e

Getting Support

Overview

You can use multiple tools to configure and troubleshoot your FW2000e:

- **Admin Web UI** – Access the Web UI for a full set of device management features. Typically, <http://192.168.1.1> provides Web UI access, however under certain conditions <http://inseego.local/>* is required. The initial sign in password is: “**Fast5G!**” (see Admin Password on page 12). **NOTE:** You cannot connect to the Web UI through a router. Your computer must be connected directly by Ethernet cable to the Data In port on the FW2000e PoE power injector. **Any time you switch the device you are connecting to the FW2000e, you must first disconnect the existing connected device and power cycle the FW2000e before connecting the new device.**
- **Inseego Connect** – Enables you to monitor and configure an entire deployment of devices. You can group devices together to push widespread configurations, troubleshoot individual devices, set alarms, and run reports. Go to connect.inseego.com to sign up for a free Inseego Connect account, which lets you configure settings, monitor status, and update firmware. Additional functionality can be obtained with a subscription to Inseego Connect Standard or Advanced.
- **Inseego Mobile App** – Allows you to perform basic device monitoring and management. Scan the QR code to install the Inseego Mobile App from AppStore or Google Play, or visit <https://inseego.com/inseego-connect-get-app> to download the App.



This chapter provides the configuration options available for your FW2000e devices. The configurations shown are from the Admin Web UI, unless otherwise noted. Many options are also available with Inseego Mobile App and Inseego Connect. Some configurations are available only with Inseego Connect, and are marked as such.

* The local Web UI address relies on having IPv6 enabled on your connecting device.

Home Page

The Home page of the Admin Web UI is the local gateway to configuring and managing your FW2000e. It displays data usage and general status information.

inseeego FW2000e

5G Sign Out

Home
Data Usage
Settings
About
Support

Welcome To Your
FW2000e Gateway

Data Usage: SIM 1 (IMSI - 310260272901314, Active)

9%
9.02 GB of data remaining
25 days to go

My Plan: 10 GB Data Plan
Data Usage: 9.02 GB remaining
0.98 GB data used | 9.02 GB data remaining
All usage is an estimate. Billing cycle ends 3/1/2022

SIM Status

SIM 1 (IMSI - 310260272901314, Active)
Carrier: T-Mobile
ICCID: 8901260272729013145
IMSI: 310260272901314
MDN: 619.919.2260
APN: b2b.static
ECGI: 0x3102602fa490d
PCI: 158
RSRP: -109 dBm
RSRQ: -12 dBm
SNR: 5 dB


General Status

Technology: 5G Sub6
Band: B41, n41
Bandwidth: 45 MHz, 100 MHz
WAN Status: Connected
SIM Status: Ready
FW Version: SDX55MOR-2.53.1 [2021-11-12 03:49:57]
IPv4: 162.191.4.127
IMEI: 9900 1628 0007 475
MAC Address: 00:15:ff:fa:33:ff

inseeego © 2022 All rights reserved. www.inseeego.com





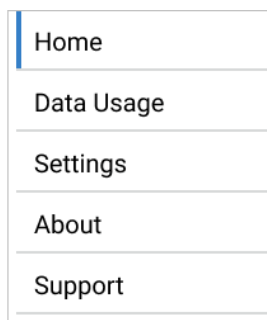

Side Menu

The Home page and each subscreen in the FW2000e Admin Web UI includes a menu on the side, which you can use to return to the Home page or jump to other pages. The current page is indicated by a blue bar. A similar side menu is available when configuring devices with InseeGo Connect.



Header Icons

The top of each FW2000e Admin Web UI page displays status indicators and icons.

Header Icon		Description
LAN (Blue)		Connected/Online
Network Signal Strength		Network Signal Strength Indicator. More bars indicate more signal strength.
SIM (Blue)		Active/Online
SIM (Black with Checkmark)		Available/Online
SIM (Black Crossed Out)		Available/Online
SIM (Grayed Out)		Disabled/Offline/No SIM

Getting Help

Select the question mark (?) in the upper right-hand corner of an Admin Web UI page to go to the Customer Support page where you can access this User Guide and other information for the FW2000e.

Admin Password

The Admin password is what you use to sign into the FW2000e Admin Web UI. The default Admin password is “**Fast5G!**”.

You are prompted to change the Admin password upon first login. Change the password to something easy to remember, and set up a security question that will help you securely recover your password if you forget what you changed it to.

Important: It is critical that you change the Admin password from the default to keep the device and your network secure.

Changing the Admin Password

To change the Admin password:

1. **From the Admin Web UI:** Click the down arrow next to **Sign Out** in the top-right corner of any Admin Web UI page and select **Change Password**.
From Inseego Connect: Select **Device > Admin Password** from the Configure side menu.
2. Enter your current Admin password, then enter a new password and confirm it.
3. Select a security question from the drop-down list and type an answer to question in the **Answer** field. **NOTE:** Answers are case-sensitive.
4. Click **Save Changes**.

The next time you sign in to the FW2000e Admin Web UI, use the new Admin password. If you cannot remember the password, click **I forgot the Admin password**. After you correctly answer the security question you set up, the current password is displayed.

Managing Data Usage

On the Admin Web UI Home page, the Data Usage panel displays graphs of your FW2000e data usage for the current billing cycle.

The screenshot shows the inseeego Admin Web UI Home page. The page features a navigation menu on the left with options: Home, Data Usage, Settings, About, and Support. The main content area is titled "Welcome To Your FW2000e Gateway" and includes a small image of the gateway device. A red box highlights the "Data Usage: SIM 1 (IMSI - 310260272901314, Active)" panel. This panel displays a circular progress indicator showing 9% data usage (9.02 GB of data remaining) and a bar chart showing 0.98 GB data used and 9.02 GB data remaining. It also indicates "My Plan: 10 GB Data Plan" and "Data Usage: 9.02 GB remaining". A "25 days to go" timer is shown. Below the bar chart, it states "All usage is an estimate. Billing cycle ends 3/1/2022". To the right of the highlighted panel, there are two status sections: "SIM Status" and "General Status".

SIM Status	
SIM 1 (IMSI - 310260272901314, Active)	
Carrier:	T-Mobile
ICCID:	8901260272729013145
IMSI:	310260272901314
MDN:	619.919.2260
APN:	b2bstatic
ECG:	0x3102602fa490d
PCI:	158
RSRP:	-109 dBm
RSRQ:	-12 dBm
SNR:	5 dB

General Status	
Technology:	5G Sub6
Band:	B41, n41
Bandwidth:	45 MHz, 100 MHz
WAN Status:	Connected
SIM Status:	Ready
FW Version:	SDX55MOR-2.53.1 [2021-11-12 03:49:57]
IPv4:	162.191.4.127
IMEI:	9900 1628 0007 475
MAC Address:	00:15:ff:fa:33:ff

To view the Data Usage page, select > from the Home page Data Usage panel or select **Data Usage** from the side menu. The Data Usage page appears.

Data Usage Page

Use the Data Usage page to view details about your FW2000e data usage.

The screenshot shows the 'Data Usage' page for the FW2000e device. The page includes a sidebar with navigation options: Home, Data Usage (selected), Settings, About, and Support. The main content area displays the following information:

- Header:** insee-go FW2000e, 5G, and Sign Out button.
- Navigation:** Home, Data Usage (selected), Settings, About, Support.
- Data Usage Section:**
 - SIM information being displayed:** SIM 1 311480538640940 (Active)
 - Message:** Your estimated data usage is displayed below. Actual billed usage may be higher than the estimated data usage displayed below. Check with your service provider for billable usage.
 - My Plan: 10 GB Data Plan**
 - Data Usage: 10.00 GB remaining
 - 0.00 GB data used (represented by a blue bar)
 - 10.00 GB data remaining (represented by a grey bar)
 - Reset data counter now button
 - All usage is an estimate. Billing cycle ends 11/1/2021
- Reset data counter on this day of the month:** 1
- Maximum data limit:** 10 GB
- Session Start:** 10/11/2021 9:58:13 AM
- Session Duration:** 00:00:26:27 (dd:hh:mm:ss)
- Session Tx:** 1.04 MB
- Session Rx:** 1.01 MB
- Monthly Tx:** 0.00 GB
- Monthly Rx:** 0.00 GB
- Monthly Total:** 0.00 GB
- Save Changes** button

SIM information being displayed: Use the drop-down to change the SIM on which data usage is displayed.

The data usage graph displays vary according to plan, but generally include:

- Estimated percentage of data remaining for the current billing cycle
- Number of days left in the billing cycle
- Data limit on your plan
- Estimated amount of data used in the current billing cycle
- Estimated amount of data remaining for the current billing cycle
- Date the billing cycle ends

NOTE

The **Maximum data limit** field is set to 10 GB by default.

Please adjust this value by entering your own data plan limit.

Use the **Reset data counter now** button to restart the data usage shown on this page to zero.

Reset data counter on this day of the month: Use the drop-down to select a day of the month for the counter displayed on this page to reset.

Maximum data limit: This field is set to 10 GB by default. Enter a maximum data limit to match your data plan. **NOTE:** You can enter a value up to 9999 GB.

Session Start: The date and time commencement of the current Internet session.

Session Duration: The amount of time that has elapsed since the connection for the current Internet session was established.

Session Tx: The amount of data transmitted for the current Internet session. This counter starts at zero when the connection is established.

Session Rx: The amount of data received for the current Internet session. This counter starts at zero when the connection is established.

Monthly Tx: The amount of data transmitted for the current billing cycle.

Monthly Rx: The amount of data received for the current billing cycle.

Monthly Total: The total amount of data for the current billing cycle.

Select **Save Changes** to enact changes.

Managing Settings

You can view and configure system settings for your FW2000e. To change system settings, select **Settings** from the side menu.


The Settings page includes five tabs:

- Preferences
- Software Update
- Backup and Restore
- SIM Manager
- Advanced

Preferences Tab

Use this tab to change how dates, time, and numbers are displayed in the FW2000e Admin Web UI.

NOTE: These preferences affect packets sent to remote servers. For example, if you select a 24 hour time format, the Web UI and any packets reporting time somewhere else, will display time in 24 hour format.

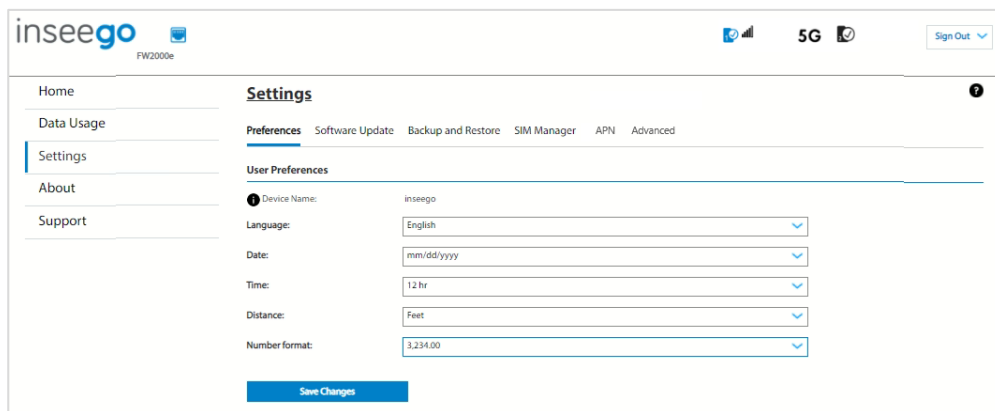

User Preferences

Device Name: The device name that defines the device network and URL to access the FW2000e local Web UI. **NOTE:** Depending on your service provider, this selection may be read-only.

Language: Select a language for the Admin Web UI.

Date: Select the date format to be used throughout the Web UI (mm/dd/yyyy or dd/mm/yyyy).

Time: Select the time format to be used throughout the Web UI (12 or 24 hour).

Distance: Select the distance format to be used for the Web UI when marking GPS altitude and accuracy (Feet or Meters).

Number format: Choose the format for decimal numbers displayed in the Web UI (using a period or comma as the decimal point).

Click **Save Changes** to update settings.

Software Update Tab

Software updates are delivered to the FW2000e automatically over the mobile network. This tab displays your current software version, last system update information, software update history, and allows you to check for new software updates.

The screenshot shows the 'insee go' mobile application interface for an FW2000e device. The top navigation bar includes the 'insee go' logo, signal strength indicators, '5G' connectivity, and a 'Sign Out' button. The main content area is titled 'Settings' and contains several sections:

- Home**: A list of navigation options including Home, Data Usage, Settings (highlighted), About, and Support.
- Settings**: A sub-menu with options for Preferences, **Software Update** (selected), Backup and Restore, SIM Manager, APN, and Advanced.
- Current Software**: Displays the 'Software Version' as 'ZN3 L2.359.0.3 MSDX55MOR-2.41 1 [2021-02-08 22:59:08]'.
- Automatic Software Updates**: Features a toggle switch for 'Enable automatic software updates', which is currently turned ON.
- Check for Software Update**: Shows the last 'Checked for Update' time as '10/11/2021 6:00:10 AM' and an 'Update Status' field. A blue 'Check for Update' button is present.
- Last Software Update**: Indicates 'No updates applied.'
- Software Update History**: Shows the 'Software Version' as 'ZN3(L2.359.0.3 MSDX55MOR-2.41 1 [2021-02-08 22:59:08])'.

Current Software

Software Version: The version of the software currently installed on your FW2000e.

Automatic Software Update

By default, software updates are automatically delivered to your FW2000e. This setting allows you to turn off automatic software updates. If you do not want software updates automatically delivered, move the **ON/OFF** slider to **OFF**.

Check for Software Update

Checked for Update: The date and time the FW2000e last checked to see if an update was available.

Update Status: This area is usually blank. If you check for an update, the results display.

Check for Update: Click this button to manually check for available software updates. If a new software update is available, it is automatically downloaded.

Last Software Update

This section displays details about the last software update.

Software Update History

This section displays details of the last updates that have been downloaded and installed to this device. If no updates have been installed, this section is not displayed.

Backup and Restore Tab

Use this tab to back up current FW2000e settings to a file on your computer, restore (upload) a previously-saved configuration file, reset the device to factory defaults, or restart the device.

The screenshot shows the 'inseeego FW2000e' web interface. The top navigation bar includes 'Home', 'Data Usage', 'Settings', 'About', and 'Support'. The 'Settings' page has sub-tabs: 'Preferences', 'Software Update', 'Backup and Restore', 'SIM Manager', 'APN', and 'Advanced'. The 'Backup and Restore' section is active and contains three main areas: 1. 'Backup Configurations' with an 'Admin password' field and a 'Download' button. 2. 'Restore Settings' with an 'Admin password' field, a 'Select a file' field (currently 'No file selected'), and a 'Browse' button, followed by a 'Restore now' button. 3. 'Restore to Factory Defaults' with a 'Restore factory defaults' button. 4. 'Restart Device' with a 'Restart' button. The top right corner shows signal strength, '5G', and a 'Sign Out' button.

Backup Configurations

To back up current FW2000e settings to a file on your computer, enter your Admin password in the **Admin password** field.

The default Admin password is **Fast5G!** and should have been changed upon first login. If you don't remember your Admin password, select **Sign In** in the top-right corner of the Home page, click **I forgot the Admin password**, and answer the displayed security question. The current Admin password will be displayed.

NOTE: If you enter an incorrect password five times in a row, you will be locked out of the Admin Web UI. To unlock it, restart your FW2000e by disconnecting the PoE cable from the PoE Injector **Data & Power Out** port for 10 seconds and reconnecting it.

Click the **Download** button. The file is automatically downloaded to your Downloads folder. This configuration file contains all settings for your FW2000e.

NOTE: The backup file cannot be edited or viewed on the downloaded system or on any other device. This file can only be restored for this model of FW2000e, and settings can only be viewed or changed using the Admin Web UI.

Restore Settings

CAUTION! Restoring settings (uploading a configuration file) changes ALL of the existing settings to match the configuration file.

To restore system settings from a backup settings file, enter your Admin password in the **Admin password** field.

Click **Browse** and choose a backup settings file to restore.

NOTE: You can only restore a file that was created for this model of FW2000e.

Click the **Restore now** button.

Restore to Factory Defaults

Restore factory defaults: This button resets all settings to their factory default values.

CAUTION! This resets all settings to their factory default values, including the Admin password.

Restart Device

Restart: This button turns your FW2000e off and on again.

SIM Manager Tab

On the Admin Web UI Home page, the SIM Status panel shows SIM status information.

The screenshot displays the Inseego Admin Web UI Home page. The page features a navigation menu on the left with options: Home, Data Usage, Settings, About, and Support. The main content area is titled "Welcome To Your FW2000e Gateway" and includes a data usage section for SIM 1 (IMSI - 310260272901314, Active). The data usage section shows a 9% progress indicator, with 9.02 GB of data used and 9.02 GB remaining. A circular timer indicates 25 days to go. The SIM status panel, highlighted with a red border, provides detailed information about the SIM card, including carrier, ICCID, IMSI, MDN, APN, ECGI, PCI, RSRP, RSRQ, and SNR. The general status section shows the technology (5G Sub6), band (B41, n41), bandwidth (45 MHz, 100 MHz), WAN status (Connected), SIM status (Ready), FW version (SDX5SMOR-2.53.1 [2021-11-12 03:49:57]), IPv4 (162.191.4.127), IMEI (9900 1628 0007 475), and MAC address (00:15:ff:fa:33:ff).

SIM Status	
SIM 1 (IMSI - 310260272901314, Active)	
Carrier:	T-Mobile
ICCID:	8901260272729013145
IMSI:	310260272901314
MDN:	619.919.2260
APN:	b2b.static
ECGI:	0x3102602fa490d
PCI:	158
RSRP:	-109 dBm
RSRQ:	-12 dBm
SNR:	5 dB

General Status	
Technology:	5G Sub6
Band:	B41, n41
Bandwidth:	45 MHz, 100 MHz
WAN Status:	Connected
SIM Status:	Ready
FW Version:	SDX5SMOR-2.53.1 [2021-11-12 03:49:57]
IPv4:	162.191.4.127
IMEI:	9900 1628 0007 475
MAC Address:	00:15:ff:fa:33:ff

Carrier: The name of the Mobile Network Operator.

ICCID: The unique ID number assigned to the SIM card.

IMSI: The International Mobile Subscriber Identity (IMSI) for your FW2000e. This is a unique number, usually fifteen digits, that identifies a Global System for Mobile Communications (GSM) subscriber.

MDN: The phone number of your FW2000e.

APN: The access point name for your FW2000e.

ECGI: E-UTRAN Cell Global Identifier. This is a 15-digit code used to identify cells globally.


PCI: The Physical Cell ID.

RSRP: The strength of the cellular signal, measured in dBm. Higher absolute values indicate a stronger signal, for example: -80 dBm is a stronger signal than -90 dBm.

RSRQ: Reference Signal Received Quality. A calculated value from RSRP and RSSI that provides a measure of signal and interference.

SNR: Signal to Noise Ratio. A ratio of signal power to noise power expressed in decibels. SNR is a positive value, and higher numbers are better.

To turn on automatic SIM switching or enter a SIM PIN, select **Settings** from the side menu. Then select **SIM Manager**. The SIM Manager tab appears:

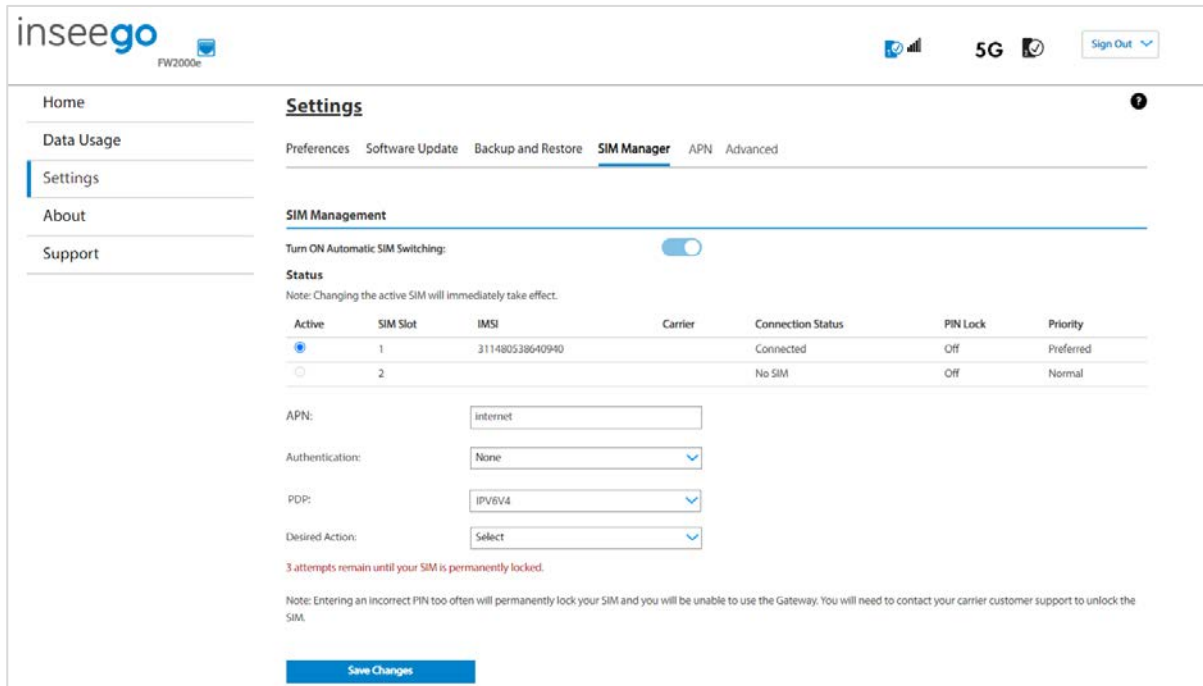

NOTE: The SIM card in your FW2000e can be locked using a PIN. If the SIM card is locked, you must enter the PIN before connecting to the mobile network. Once entered, the PIN is remembered until the next shutdown. You may also need to provide the existing PIN to change a SIM. The default PIN is available from your service provider.

SIM Management

Turn ON Automatic SIM Switching: When enabled, the SIM is switched automatically if the active SIM is disconnected. When **OFF**, you can manually switch between SIMs and change SIM settings.

Status

Active: Select the SIM you want to be active. **NOTE:** The change will take effect immediately.

SIM Slot: The SIM slot number.

IMSI: The International Mobile Subscriber Identity (IMSI) for your FW2000e. This is a unique number, usually fifteen digits, that identifies a Global System for Mobile Communications (GSM) subscriber.

Carrier: The cellular carrier associated with the SIM.

Connection Status: The current status of the SIM.

PIN Lock: If On, the PIN lock has been turned on, and the SIM PIN must be entered to connect to the mobile network. If Off, the PIN lock feature is not turned on and the SIM PIN is not required.

Priority: Indicates whether the SIM is Normal or Preferred priority.

NOTE: Some or all of the following APN fields may not be visible, depending on your service provider. If this section is not visible, use the **Settings > APN** tab. Information entered in these fields should come from your service provider based on network requirements.

APN: The access point name for your FW2000e. Use the drop-down to select a different APN. Select an APN supplied by your service provider from the drop-down, or select **Add APN** and enter the APN for your private network in the text box that appears below.

The following table includes some commonly used APNs. Contact your service provider to confirm the correct APN for your line of service.

Carrier	APN Type	APN
Verizon	Public Dynamic	vzwinternet
	Public Static-West	we01.vzwstatic
	Public Static-Northwest	nw01.vzwstatic
	Public Static-Northeast	ne01.vzwstatic
	Public Static-South	so01.vzwstatic
	Public Static-Midwest	mw01.vzwstatic
AT&T	Public Dynamic	broadband
	Public Dynamic	i2gold
T-Mobile	Public Dynamic	fast.t-mobile.com
	Public Static	b2b.static
Telstra	Public Dynamic	telstra.internet

CAUTION! Changing the APN may cause a loss of data connectivity.

Authentication: Select the authentication method for your private network from the drop-down (PAP, CHAP, PAP and CHAP, or None).

Username: Enter the user name for your private network. **NOTE:** This option is not visible when Authentication is set to **None**.

Password: Enter the password for your private network. **NOTE:** This option is not visible when Authentication is set to **None**.

PDP: Select a type of Packet Data Protocol (PDP) from the drop-down (IPv4, IPv6, or IPv4/IPv6).

Desired Action: The actions available depend on the SIM status. Possible operations include:

- **PIN Lock** - If the SIM is currently PIN locked, you are prompted to enter the PIN.
NOTE: If an incorrect PIN is entered too many times, the SIM becomes PUK locked. A counter

indicates how many incorrect entries will cause PUK lock. Once PUK locked, the PUK must be obtained from your service provider.

- **PUK Lock** - If the SIM is currently PUK locked, the only operation possible is to enter the PUK. **NOTE:** If an incorrect PUK is entered too many times, the SIM becomes permanently unusable. You will need to obtain a new SIM. A counter indicates how many entry attempts remain.
- **Turn on PIN Lock** - Sets the SIM so that entry of a PIN is required upon startup to connect to the mobile network. To perform this operation, you must enter the current PIN.
- **Turn off PIN Lock** - Turns off a PIN lock that was previously turned on so that entry of a PIN is no longer required to connect to the mobile network. To perform this operation, you must enter the current PIN.

Click **Save Changes**. The device will reboot for changes to take effect.

APN Tab

NOTE: This tab may not be visible, depending on your service provider. If this tab is not visible, use **Settings > SIM Manager** for APN settings.

In most configurations, the FW2000e is used with a dynamic IP and SIM and the Access Point Name (APN) is available from the network, for example: *internet*. However, if you are on a private network, you may need to configure connection profiles for your APN on this tab for the network to communicate with the FW2000e.

Active	Profile Name	APN Name	Authentication	IP Connection Type		
<input checked="" type="radio"/>	Telstra Broadband	telstra.internet	None	IPv4/IPv6	Edit	Reset

Caution: Changing the APN may cause loss of data connectivity.

Connection Profile Name:

APN Name:

Add APN:

Authentication:

Username:

Password:

IP Connection Type:

Select SIM to configure APN/SIM information being displayed: The SIM on which you are configuring connection profile information.

Connection Profiles

NOTE: Initially, the default APN profile for the active SIM is displayed. You cannot delete this profile, but you can edit it and/or add additional profiles for the SIM.

Active: Select the connection profile you want to be active.

Profile Name: The name that identifies the connection profile.

APN Name: The access point name.

Authentication: The authentication method for your private network.

IP Connection Type: The IP connection type for your private network.

Click **Edit** to edit a profile.

Click **Reset** to reset a profile to default values.

Click the **Add New Connection Profile** button to add an additional APN connection profile for this SIM.

Add New Connection Profile

Connection Profile Name: Enter a name to identify this connection profile.

APN Name: Select an APN supplied by your service provider from the drop-down, or select **Add APN** and enter the APN for your private network in the text box that appears below.

The following table includes some commonly used APNs. Contact your service provider to confirm the correct APN for your line of service.

Carrier	APN Type	APN
Verizon	Public Dynamic	vzwinternet
	Public Static-West	we01.vzwstatic
	Public Static-Northwest	nw01.vzwstatic
	Public Static-Northeast	ne01.vzwstatic
	Public Static-South	so01.vzwstatic
	Public Static-Midwest	mw01.vzwstatic
AT&T	Public Dynamic	broadband
	Public Dynamic	i2gold
T-Mobile	Public Dynamic	fast.t-mobile.com
	Public Static	b2b.static
Telstra	Public Dynamic	telstra.internet

CAUTION! Changing the APN may cause a loss of data connectivity.

NOTE: Information entered in the following fields should come from your service provider based on network requirements.

Authentication: Select the authentication method for your private network from the drop-down (PAP, CHAP, PAP and CHAP, or None).

Username: Enter the user name for your private network. **NOTE:** This option is not visible when Authentication is set to **None**.

Password: Enter the password for your private network. **NOTE:** This option is not visible when Authentication is set to **None**.

IP Connection Type: Select an IP connection type from the drop-down (IPv4, IPv6, or IPv4/IPv6).

Click **Save Changes**.

Advanced Tab

Advanced settings are intended for users with technical expertise in the area of telecommunication and networking.

WARNING! Changing the Advanced settings may be harmful to the stability, performance, and security of the FW2000e.


When you select the **Advanced** tab on the Settings page, a warning message appears. If you click **Continue**, the Cellular tab of the Advanced Settings page appears.

Advanced Settings include:

- Cellular
- Manual DNS
- Firewall
- LAN
- WAN Settings (Inseego Connect only)
- Port Filtering
- Port Forwarding
- Inseego Connect

Cellular Sub Tab

In most configurations, the FW2000e is used with a dynamic IP and SIM and the Access Point Name (APN) is available from the network, for example: *internet*. However, if you are on a private network, you may need to set the APN on this tab for the network to communicate with the FW2000e.

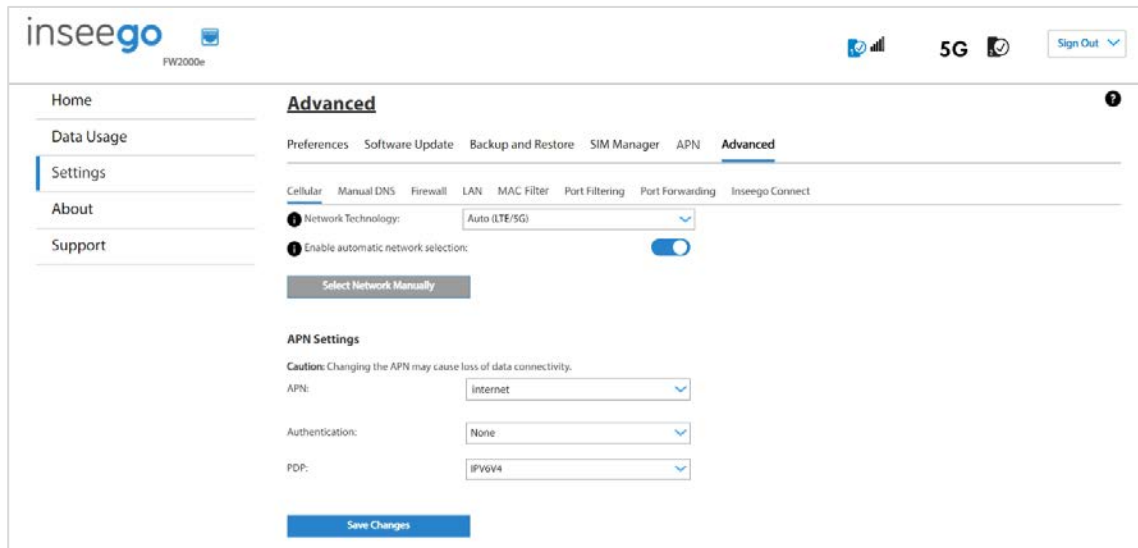

Network Technology: Use the drop-down to select the type of cellular data connection (Auto (LTE/5G), or LTE). **NOTE:** This field may not be visible, depending on your service provider.

Enable automatic network selection: When the **ON/OFF** slider is **ON**, your FW2000e automatically selects the best 5G available network and you cannot use the **Select a Different Network** button below.

Select Network Manually: You may wish to use this option if multiple networks are available and you have a preference. **NOTE:** This option is available only if **Enable automatic network selection** is off. Click the button to scan for available networks, then choose the preferred network.

APN Settings

NOTE: Inseego recommends configuring APN settings in the APN section of **Settings > SIM Manager** instead of this page (or **Advanced > Settings > APN**, depending on service provider). The objects in this section display the APN configuration settings for the active SIM.

APN: Select an APN supplied by your service provider from the drop-down, or select **Add APN** and enter the APN for your private network in the text box that appears below.

CAUTION! Changing the APN may cause a loss of data connectivity.

Authentication: Select the authentication method for your private network from the drop-down (PAP, CHAP, PAP and CHAP, or None).

Username: Enter the user name for your private network. **NOTE:** This option is not visible when Authentication is set to **None**.


Password: Enter the password for your private network. **NOTE:** This option is not visible when Authentication is set to **None**.

PDP: Select a type of Packet Data Protocol (PDP) from the drop-down (IPv4, IPv6, or IPv4/IPv6).

Click **Save Changes**. The device will reboot for changes to take effect.

Manual DNS Sub Tab

The FW2000e automatically selects a Domain Name Server (DNS). This page allows you to manually assign up to two DNS IP addresses.

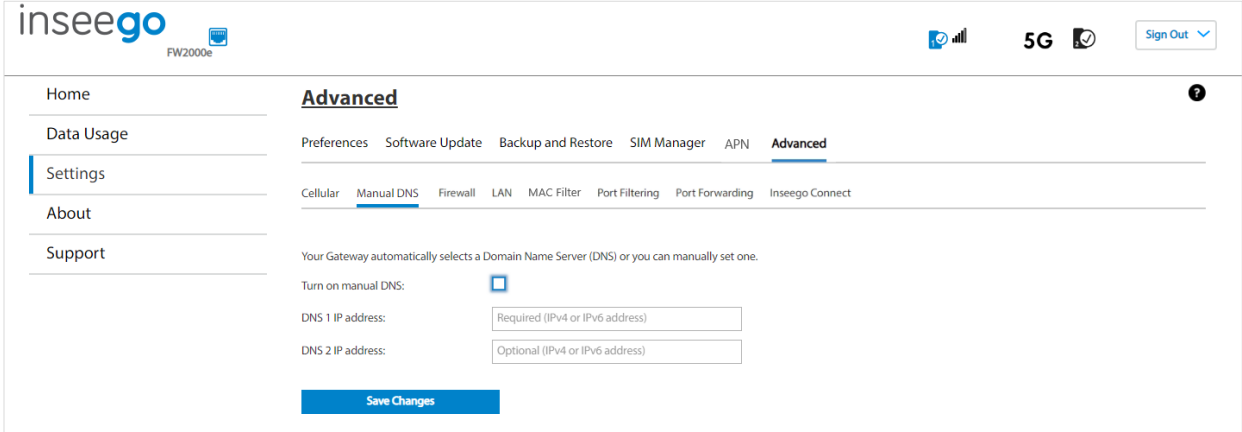

Turn on manual DNS: Check this box to manually select a DNS.


DNS 1 IP address: Enter the IP address for the primary DNS. This address is required to use the Manual DNS feature.

DNS 2 IP address: Enter the IP address for the secondary (backup) DNS. This address is optional and may be left blank if desired.

Click **Save Changes**.

Firewall Sub Tab

The FW2000e firewall determines which Internet traffic is allowed to pass between the CPE and connected devices and protects your connected devices from malicious incoming traffic from the Internet. The firewall cannot be turned off. Use the Firewall tab to adjust the general security level of the firewall, designate a specific device to receive all traffic, and set up specific firewall rules.

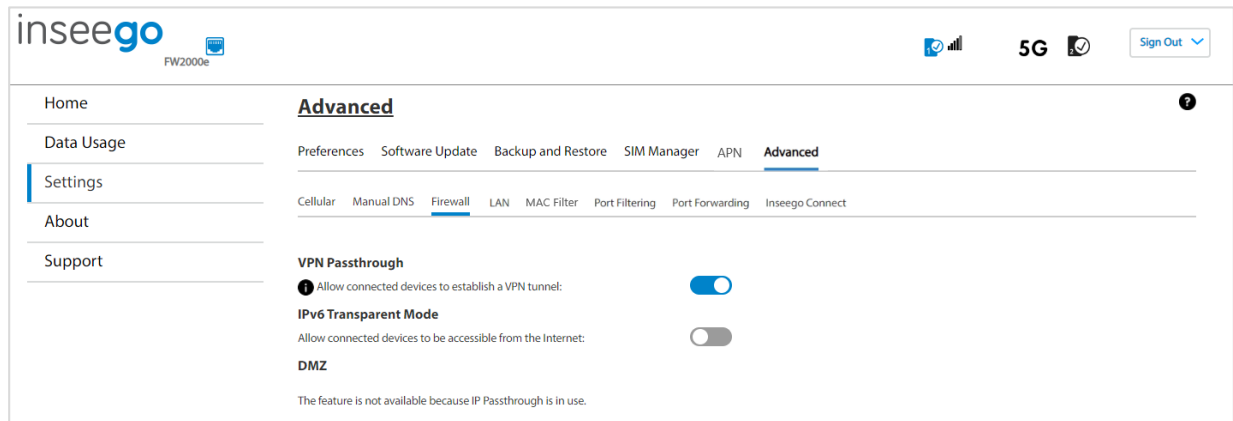

VPN Passthrough

To allow connected devices to establish a VPN tunnel, ensure the **ON/OFF** slider is **ON**.

IPv6 Transparent Mode

To use IPv6 Transparent Mode, move the **ON/OFF** slider to **ON**. This allows connected devices to be accessible from the Internet.

DMZ

NOTE: When IP Passthrough is turned on, you will not be able to allow DMZ. Go to **Settings > Advanced > LAN** and turn IP Passthrough off.

DMZ allows the connected device specified as the DMZ IP address (Destination IP address) to receive all traffic that would otherwise be blocked by the firewall.

NOTE: Allowing DMZ may assist some troublesome network applications to function properly, but the DMZ device should have its own firewall to protect itself against malicious traffic.

Allow DMZ: Check this box to allow DMZ.

Destination IP address: Enter the IP address of the connected device you wish to become the DMZ device (the DMZ destination). **NOTE:** You can check the IP address of each connected device on the Connected Devices screen.

LAN Sub Tab

This page provides settings and information about the FW2000e's local area network (LAN). The LAN consists of the device and all connected devices.

The screenshot shows the 'inseeego' web interface for the FW2000e device. The top navigation bar includes 'Home', 'Data Usage', 'Settings', 'About', and 'Support'. The main content area is titled 'Advanced' and contains several sub-sections: 'Preferences', 'Software Update', 'Backup and Restore', 'SIM Manager', 'APN', and 'Advanced'. The 'Advanced' section is further divided into 'Cellular', 'Manual DNS', 'Firewall', 'LAN', 'MAC Filter', 'Port Filtering', 'Port Forwarding', and 'InseeGo Connect'. The 'LAN' sub-tab is selected, showing 'IP Passthrough' settings. The 'IP Passthrough' section is enabled by default, with a checkbox checked. Below this, the 'IPv4' section contains fields for IP Address (192.168.1.1), Subnet Mask (255.255.255.0), MAC Address, Turn on DHCP Server (checked), DHCP Lease Time (1440 minutes), Start DHCP Address Range at (192.168.1.2), and End DHCP Address Range at (192.168.1.102). The 'IPv6' section is also enabled by default, with a checkbox checked and a Link-Local Address of fe80::215:ffff:fe6a:33cf. A 'Save Changes' button is located at the bottom of the page.

IP Passthrough

IP Passthrough (IPPT) is enabled by default. IPPT enables the first device detected to obtain the IP address assigned by the mobile network, allowing you to enable a one-to-one connection to a host routing system. **NOTE: Any time you switch the device you are connecting to the FW2000e, you must first disconnect the existing connected device and power cycle the FW2000e before connecting the new device.**

When IPPT is enabled, the following capabilities are set through the host routing system and Web UI settings are not available:

- DMZ (Firewall)
- IPv4 (LAN)
- MAC Filter
- Port Filtering
- Port Forwarding

Turn on IP Passthrough: IP Passthrough is enabled by default. This enables the first device detected to obtain the IP address assigned by the mobile network.

IPv4

NOTE: When IP Passthrough is turned on, you will not be able to configure IPv4.

IP Address: The IP address for your FW2000e, as seen from the local network. Normally, you can use the default value.

Subnet Mask: The subnet mask network setting for the FW2000e. The default value 255.255.255.0 is standard for small (class "C") networks. If you change the LAN IP Address, make sure to use the correct Subnet mask for the IP address range of the LAN IP address.

MAC Address: (read-only) The Media Access Controller (MAC) Address for the Wi-Fi interface on your FW2000e. The MAC address is a unique network identifier assigned when a network device is manufactured.

Turn on DHCP server: This checkbox turns the DHCP Server feature on or off. This should be left checked. The DHCP server allocates an IP address to each connected device. **NOTE:** If the DHCP Server is turned off, each connected device must be assigned a fixed IP address.

DHCP Lease Time: The number of minutes for which IP address are reserved for a given client by the DHCP server. Normally, this can be left at the default value, but if you have special requirements, you can change this value.

Start DHCP Address Range at: The start of the IP address range used by the DHCP server. If the IP is set on the client device, use an IP address outside of this DHCP range; if the IP address is set using an IP reservation, it will usually be inside this range. **NOTE:** Only expert users should change this setting.

End DHCP Address Range at: The end of the IP address range used by the DHCP server. If the IP is set on the client device, use an IP address outside of this DHCP range; if the IP address is set using an IP reservation, it will usually be inside this range. **NOTE:** Only expert users should change this setting.

IPv6

Turn on IPv6: Check the box if the connected device supports IPv6. This enables IPv6 connected devices to make IPv6 connections to the Internet. **NOTE:** The local Web UI address (<http://inseego.local/>) relies on having IPv6 enabled on your connecting device.

Link-Local Address: The Link-Local IPv6 address if the connected device supports IPv6.

Click **Save Changes** to activate and save new settings.

WAN Settings

NOTE: WAN settings are available only with Inseego Connect.

Use this page to enable and configure WAN keep alive.

WAN Settings	
Enable WAN Keep Alive	<input checked="" type="checkbox"/>
Lookup Address 1 *	www.google.com
Lookup Address 2 *	www.yahoo.com
Lookup Address 3 *	www.inseego.com
Keep Alive Interval *	30 (seconds)
Number Of Attempts *	3
Retry Interval *	10 (seconds)

WAN Settings

Enable WAN Keep Alive: If ON, keep alive verifies lookup addresses to check the Internet connectivity on the WAN connection.

WAN Lookup Address 1: Enter the first DNS IP address to verify the WAN connection.

WAN Lookup Address 2: Enter the second DNS IP address to verify (if Lookup Address 1 does not respond with keep alive acknowledgement (ACK)).

WAN Lookup Address 3: Enter the third DNS IP address to verify (if Lookup Address 2 does not respond with keep alive ACK).

Keep Alive Interval: Enter the desired number of seconds without receiving a valid packet before the first keep alive verification occurs.


Number of Attempts: Enter the number of times to retry after verification failure for all three lookup addresses.

Retry Interval: Enter the number of seconds between verification retries.

MAC Filter Sub Tab

The MAC filter allows only selected devices to access the FW2000e network through DHCP. By default, MAC filter is turned off.

Use this tab to turn the MAC Filter on and specify device access.

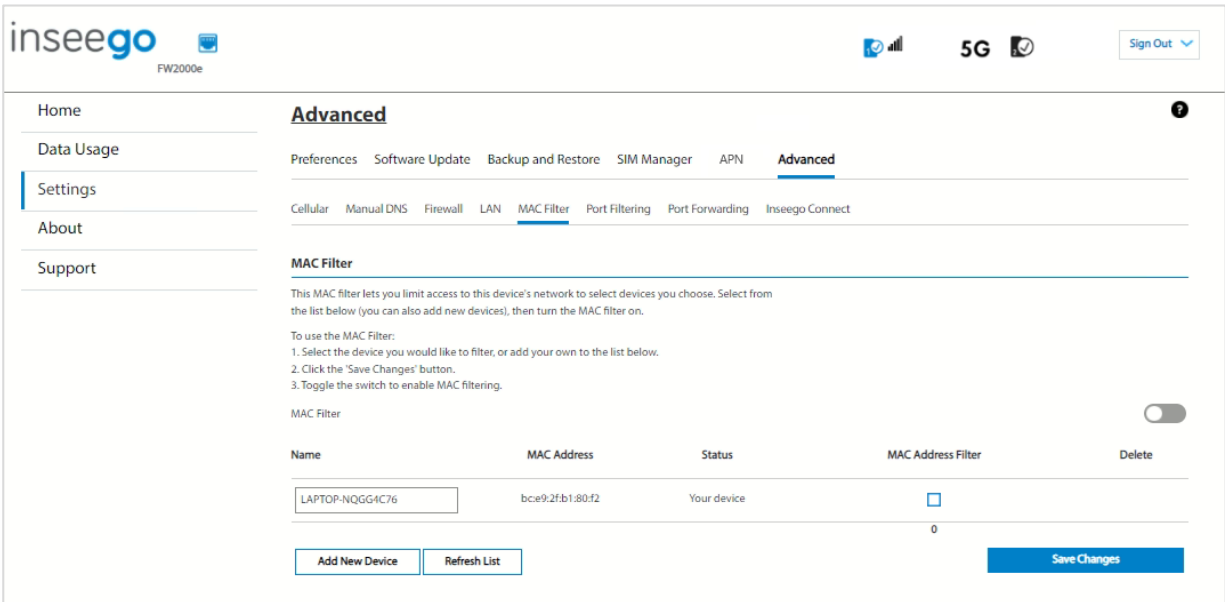

NOTE: When IP Passthrough is turned on, MAC Filter capabilities are set through the connected host routing system. Settings on this page are not available. Go to **Settings > Advanced > LAN** and turn IP Passthrough off.

MAC Filter

To use the MAC filter, select the device(s) from the device list that you want to be allowed to connect to the network through DHCP and move the **MAC Filter ON/OFF** slider to **ON**. Click **Save Changes**.

CAUTION! Turning on MAC filtering immediately disconnects all devices that are not included in the filter from the network.

Device List

This list includes all devices currently connected to the FW2000e.

Add New Device: Use this button to add a device to the device list, then enter the device name, MAC address, choose whether to select the MAC Address Filter checkbox, and click **Save Changes**.

To delete a device from the list, select its **Delete** checkbox and click **Save Changes**.

To discard any unsaved changes and refresh the list, click **Refresh List** and **Confirm**.

Port Filtering Sub Tab

Port Filtering allows you to block outgoing Internet connections and permit only selected applications to access the Internet. Traffic is identified by port numbers. Some applications are pre-defined. You can define additional applications if you know the details of the traffic used and generated by the applications.

The screenshot shows the inseeego FW2000e web interface. The top navigation bar includes the inseeego logo, signal strength indicators, 5G connectivity, and a Sign Out button. The left sidebar contains navigation links: Home, Data Usage, Settings (highlighted), About, and Support. The main content area is titled 'Advanced' and includes sub-tabs: Preferences, Software Update, Backup and Restore, SIM Manager, APN, and Advanced (selected). Under the Advanced tab, there are sub-sections: Cellular, Manual DNS, Firewall, LAN, MAC Filter, Port Filtering (selected), Port Forwarding, and Inseeego Connect. The Port Filtering section contains a toggle switch that is currently turned off. Below this is the 'Applications' section, which allows selecting applications to access the Internet. The list includes: Email (POP3, IMAP, SMTP), FTP, HTTP, HTTPS, and Telnet. The 'Custom Applications' section provides instructions on defining custom applications and includes a table with columns for On, App Name, Start Port, End Port, Protocol, and Delete. A table entry shows 'Custom App 1' with Start Port 20, End Port 80, and Protocol TCP. At the bottom, there are buttons for 'Add custom application' and 'Save Changes'.

NOTE: When IP Passthrough is turned on, port filtering capabilities are set through the connected host routing system. Settings on this page are not available. Go to **Advanced > LAN** and turn IP Passthrough off.

Port Filtering: To turn on port filtering, move the **ON/OFF** slider to **ON**. To turn off port filtering, so that any application can connect to the Internet, move the slider to **OFF**.

Applications

Select the applications you want to be able to access the Internet.

The following table provides port numbers and protocol information for each port filtering application listed.

Application Name	Port	TCP*	STCP*	UDP*
Email				
POP3	110	Yes	No	Assigned
POP3S	995	Yes	No	Yes
IMAP	143	Yes	No	Assigned
IMAPS	993	Yes	No	Assigned
SMTP	25	Yes	No	Assigned
SecureSMTP	465	Yes	No	No
FTP control (command)	21	Yes	Yes	Assigned
FTP data transfer	20	Yes	Yes	Assigned
HTTP	80	Yes	Yes	Assigned
HTTPS	443	Yes	Yes	Assigned
Telnet	23	Yes	No	Assigned

Custom Applications

Add custom application: Use this button to add a new row to the custom application list.

Custom Applications ✕

You can define your own applications, and then turn them on or off as needed. To define an application, you need to know the outgoing ports used by the application.

On	App Name	Start Port	End Port	Protocol	Delete
<input checked="" type="checkbox"/>	<input type="text" value="App 1"/>	<input type="text"/>	<input type="text"/>	TCP ▾	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="text" value="App 2"/>	<input type="text"/>	<input type="text"/>	TCP ▾	<input type="checkbox"/>

- **On:** Check this box if you want the new application to be able to access the Internet.
- **App Name:** Enter a name for the custom application.

* **Yes** indicates the protocol is standardized for the port number.

No indicates the protocol is not standardized for the port number.

Assigned indicates the port number is assigned by IANA (Internet Assigned Numbers Authority) for protocol use, but may not be standardized.

- **Start Port:** Enter the beginning of the range of port numbers used by outgoing traffic for the custom application being added.
- **End Port:** Enter the end of the range of port numbers used by the application.

NOTE: If the application uses a single port instead of a range, type the same value for both the **Start Port** and the **End Port**.

- **Protocol:** Select the protocol used by the port range from the drop-down list (TCP, UDP, or both).
- **Delete:** Check this box to delete a custom application. **NOTE:** Click on the Port Filtering tab again to remove deleted custom applications from view on the screen.

Click **Save Changes** to save any changes made to the custom applications.

Port Forwarding Sub Tab

Port Forwarding allows specific applications to be forwarded to a particular device connected to your network. Normally, the built-in firewall blocks incoming traffic from the Internet. Port forwarding allows Internet users to access any server you are running on your computer, such as a Web, FTP, or Email server.

Important: Port forwarding creates a security risk and should not be turned on unless it is required.

Some mobile networks provide you with an IP address on their own network rather than an Internet IP address. In this case, Port Forwarding cannot be used, because Internet users cannot reach your IP address.

The screenshot shows the 'inseeego FW2000e' web interface. The top navigation bar includes 'Home', 'Data Usage', 'Settings', 'About', and 'Support'. The main content area is titled 'Advanced' and contains sub-tabs: 'Preferences', 'Software Update', 'Backup and Restore', 'SIM Manager', 'APN', and 'Advanced'. Under the 'Advanced' sub-tab, there are further options: 'Cellular', 'Manual DNS', 'Firewall', 'LAN', 'MAC Filter', 'Port Filtering', 'Port Forwarding', and 'Inseeego Connect'. The 'Port Forwarding' section is active, showing a toggle switch that is turned on. Below the toggle, there is a table of applications with checkboxes and input fields for their IP addresses:

Application	Application IP address
<input type="checkbox"/> DNS	<input type="text"/>
<input type="checkbox"/> FTP	<input type="text"/>
<input type="checkbox"/> HTTP/HTTPS	<input type="text"/>
<input type="checkbox"/> NNTP	<input type="text"/>
<input type="checkbox"/> POP3/POP3S	<input type="text"/>
<input type="checkbox"/> SMTP/Secure SMTP	<input type="text"/>
<input type="checkbox"/> SNMP	<input type="text"/>
<input type="checkbox"/> Telnet	<input type="text"/>
<input type="checkbox"/> TFTP	<input type="text"/>

Below this table is the 'Custom Applications' section, which includes a table with the following columns: 'On', 'App Name', 'IP Address', 'Port Type', 'Port Numbers' (with 'From' and 'To' sub-columns), 'Protocol', and 'Delete'. There is one entry in the table:

On	App Name	IP Address	Port Type	Port Numbers	Protocol	Delete
<input checked="" type="checkbox"/>	Custom App 1	<input type="text"/>	Range	From: <input type="text"/> To: <input type="text"/>	TCP	<input type="checkbox"/>

At the bottom of the 'Custom Applications' section, there are two buttons: 'Add custom application' and 'Save Changes'.

NOTE: When IP Passthrough is turned on, port forwarding capabilities are set through the connected host routing system. Settings on this page are not available. Go to **Advanced > LAN** and turn IP Passthrough off.

Port forwarding: To turn on port forwarding, move the **ON/OFF** slider to **ON**. To turn off port forwarding, so that no inbound traffic is forwarded to a LAN client, move the slider to **OFF**.

Applications

Check the box next to each Port Forwarding application that you want to allow.

To forward all inbound WAN traffic on a specific port to a single LAN client, enter the IP address of the target device in the **Application IP address** field.

The following table provides port numbers and protocol information for each port forwarding application listed.

Application Name	Port	TCP*	STCP*	UDP*
DNS	53	Yes	No	Yes
FTP control (command)	21	Yes	Yes	Assigned
FTP data transfer	20	Yes	Yes	Assigned
HTTP	80	Yes	Yes	Assigned
HTTPS	443	Yes	Yes	Assigned
NNTP	119	Yes	No	Assigned
POP3	110	Yes	No	Assigned
POP3S	995	Yes	No	Yes
SMTP	25	Yes	No	Assigned
SecureSMTP	465	Yes	No	No
SNMP	161	Assigned	No	Yes
Telnet	23	Yes	No	Assigned
TFTP	69	Assigned	No	Yes

Custom Applications

Add custom application: Use this button to add a new row to the custom application list. You can add up to ten custom applications. Once defined, these applications can be turned on and off the same way as pre-defined applications.

On: Check this box if you want the new application to be able to access the Internet (enabling port forwarding).

App Name: Enter a name for the custom application.

IP Address: If you want to limit service for the application to a single connected device, enter the IP address of the target device. To find the IP address of a device, go to the Connected Devices page. **NOTE:** To ensure the device you are forwarding to does not have a different IP address after a reboot, either statically assign the IP address on the client device, or set up a DHCP reservation.

Port Type: Select Range or Translate from the drop-down list.

* **Yes** indicates the protocol is standardized for the port number.

No indicates the protocol is not standardized for the port number.

Assigned indicates the port number is assigned by IANA (Internet Assigned Numbers Authority) for protocol use, but may not be standardized.

Port Numbers: Use the **From** and **To** fields to specify the range of port numbers to be forwarded. **NOTE:** If the application uses a single port instead of a range, type the same value in both the **From** and **To** fields.

For translate ports, use the **Ext.** and **Int.** to specify ports. **NOTE:** Forwarding takes inbound traffic on a port to the same port on a client device. Use translate ports to send traffic to a different port on the client device. For example, instead of having inbound traffic on port 1234 forward to port 1234 of the client device, you can have it forward to port 5678.


Protocol: Select the protocol used by the port range from the drop-down list (TCP, UDP, or both).

Delete: Check this box to delete a custom application. **NOTE:** Click on the Port Forwarding tab again to remove deleted custom applications from view on the screen.

Click **Save Changes** to save any changes made to the custom applications.

Inseego Connect Sub Tab

Use this page to enable and configure settings for connection with Inseego Connect. Inseego Connect is a cloud platform product that provides 360 degree visibility and secure accessibility into your deployment from a single platform.

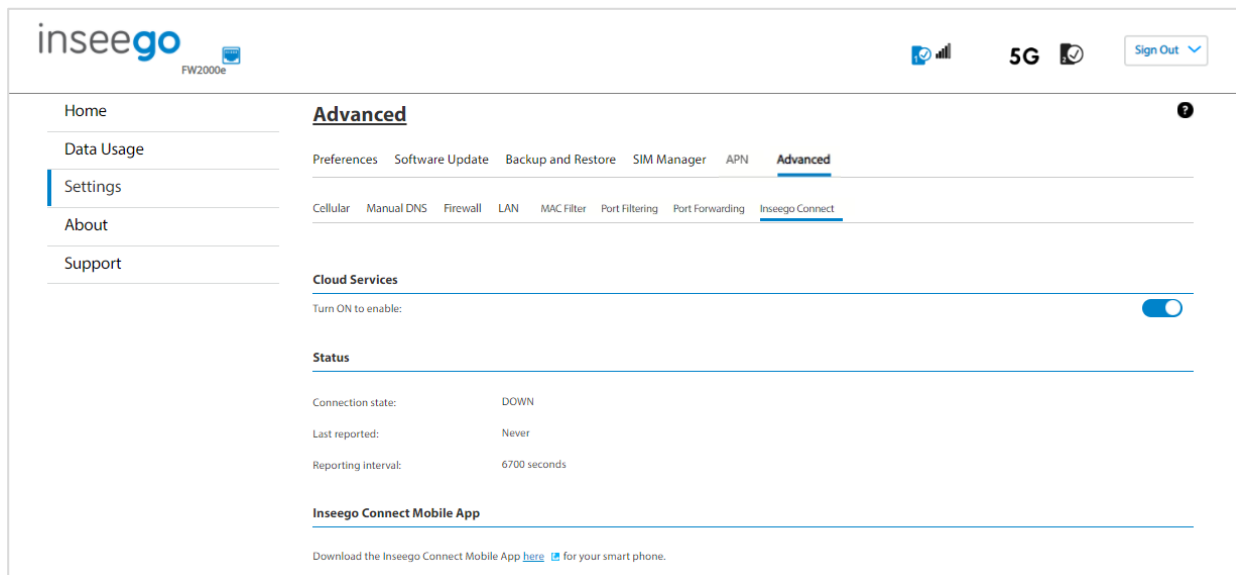

Cloud Services

By default, the connection to Inseego Connect is **ON**. Slide the ON/OFF slider to **OFF** if you wish to disable the connection.

Status

Connection state: The status of the Inseego Connect connection.

- **UP** – FW2000e is communicating with Inseego Connect servers.
- **DOWN** – FW2000e is NOT communicating with Inseego Connect servers.

Last reported: The time when FW2000e last sent a packet to Inseego Connect servers.

Reporting interval: This is the interval at which your FW2000e will send packets into the Inseego Connect server. **NOTE:** A shorter interval means more data usage.

Inseego Connect Mobile App

You can download the Inseego Mobile App from your device's app store.

Viewing Info About the FW2000e

On the Admin Web UI Home page, the General Status panel shows general system information.

The screenshot displays the inseeego FW2000e Admin Web UI. The top navigation bar includes the inseeego logo, a 'Sign Out' button, and a '5G' indicator. The left sidebar contains links for Home, Data Usage, Settings, About, and Support. The main content area features a 'Welcome To Your FW2000e Gateway' message with a device image. Below this, there are two data usage charts: 'Data Usage: SIM 1 (IMSI - 310260272901314, Active)' showing 9% data remaining (9.02 GB) and 'My Plan: 10 GB Data Plan' showing 0.98 GB used and 9.02 GB remaining. On the right, the 'SIM Status' panel lists details like Carrier (T-Mobile), IMSI, and SNR. The 'General Status' panel, highlighted with a red border, provides information on Technology (5G Sub6), Band (B41_n41), Bandwidth (45 MHz, 100 MHz), WAN Status (Connected), SIM Status (Ready), FW Version (SDX55MOR-2.53.1), IPv4 (162.191.4.127), IMEI (9900 1628 0007 475), and MAC Address (00:15:ff:fa:33:ff).

Technology: Indicates the current cellular data connection, for example, 5G Sub6.

Band: The band in use for the current connection.

Bandwidth: The bandwidth in use for the current connection.

WAN Status: The current status of the WAN connection.

SIM Status: The current status of the SIM card.

FW Version: The version of the firmware (software) currently installed on your FW2000e.

IPv4: The network IP address assigned to your computer, not your FW2000e device.

IMEI: The International Mobile Equipment Identity (IMEI) for your FW2000e. This is a 15 digit code used to uniquely identify an individual mobile station. The IMEI does not change when the SIM is changed.

MAC Address: The Media Access Controller (MAC) Address for your FW2000e. The MAC address is a unique network identifier assigned when a network device is manufactured.

To view more information about your FW2000e and its use, select **About** from the side menu.

The About page includes the following tabs:

- Internet Status
- Internet Sessions
- Diagnostics
- Device Info
- GPS
- Logs

Internet Status Tab

Use the Internet Status tab to view general Internet connection and system information.

The screenshot shows the 'insee-go' web interface for the FW2000e device. The 'About' page is active, with the 'Internet Status' tab selected. The interface includes a navigation menu on the left with options like Home, Data Usage, Settings, About, and Support. The main content area shows the following information:

General	
Status:	Connected
Network Name:	
Technology:	5G
Time Connected:	00:01:34:08 (yy:dd:hh:mm:ss)
Received:	18.03 MB
Transmitted:	4.69 MB

IPv4	
IP Address:	100.89.196.235
Mask:	255.255.255.248
Gateway:	100.89.196.236
DNS:	198.224.145.135

IPv6	
IP Address:	2600:1007:b01aa962:a8b5:645:f635:d714

General

Status: The current status of the FW2000e Internet connection.

Network Name: The name of the network for the current Internet session established.

Technology: Indicates the current cellular data connection, for example, 5G.

Time Connected: The amount of time that has elapsed since the connection for the current Internet session was established.

Received: The amount of data received for the current Internet session. This counter starts at zero when the connection is established.

Transmitted: The amount of data transmitted for the current Internet session. This counter starts at zero when the connection is established.

IPv4

IP Address: The Internet IP address assigned to the FW2000e.

Mask: The network mask associated with the IPv4 address.

Gateway: The gateway IP address associated with the IPv4 address.

DNS: The Domain Name Server currently used by the FW2000e.

IPv6

IP Address: The global IPv6 address for the FW2000e (blank if IPv6 is turned off or is not supported by the current network connection or operator).

Internet Sessions Tab

Use the Internet Sessions tab to export and view Internet session data.

Date/Time	Duration	Received Data	Transmitted Data	Total Data	IPv4 Address	IPv6 Address
10/12/2021 8:09:02 AM	00:01:18:59	16.82 MB	4.22 MB	21.04 MB	100.89.196.235	2600:1007:b01:aa962:a8b5:645:f635:d714

Export Internet Sessions Information

Click the **Export** button to display Internet session data.

Internet Sessions

NOTE: Internet Sessions are presented in date order.

Date/Time: The date and time the Internet session began.

Duration: The total amount of time for the Internet session.

Received Data: The amount of data received for the Internet session. This counter starts at zero when the connection is established.

Transmitted Data: The amount of data transmitted for the Internet session. This counter starts at zero when the connection is established.

Total Data: The total amount of data for the Internet session. This is the sum of Received Data and Transmitted Data.

IPv4 Address: The IP address for the session.

IPv6 Address: The global IPv6 address for the session (blank if IPv6 is turned off or is not supported by the current network connection or carrier).

Diagnostics Tab

This tab displays detailed information used solely for troubleshooting or technical support.

The screenshot shows the inseeGO FW2000e diagnostics interface. The top navigation bar includes the inseeGO logo, a signal strength indicator, 5G connectivity, and a 'Sign Out' button. The left sidebar contains menu items: Home, Data Usage, Settings, About (selected), and Support. The main content area is titled 'About' and has sub-tabs for Internet Status, Internet Sessions, Diagnostics (selected), Device Info, GPS, and Logs. Under the 'Diagnostics' tab, there are two sections: 'Modem' and '5G Network'. The 'Modem' section lists: Mobile Number (MDN): 619.919.2260, IMEI: 9900 1628 0007 475, IMSI: 310260272901314, and FW Version: SDXSSMOR.2.53.1 [2021-11-12 03:49:57]. The '5G Network' section lists: Status: Connected, Technology: 5G Sub6, Band: B41_n41, Bandwidth: 45 MHz, 100 MHz, Network Operator: T-Mobile, Signal Strength: -108 dBm, SNR: 5 dB, Roaming: No, and Cell ID (ECGI): 862180374890765.

Modem

Mobile Number (MDN): The phone number of your FW2000e.

IMEI: The International Mobile Equipment Identity (IMEI) for your FW2000e. This is a 15 digit code used to uniquely identify an individual mobile station. The IMEI does not change when the SIM is changed.

IMSI: The International Mobile Subscriber Identity (IMSI) for your FW2000e. This is a unique number, usually fifteen digits, that identifies a Global System for Mobile Communications (GSM) subscriber.

FW Version: The version of the firmware (software) currently installed on your FW2000e.

Network

Status: The status of the network.

Technology: Indicates the current cellular data connection, for example, 5G Sub6.

Band: The band in use for the current connection.

Bandwidth: The bandwidth in use for the current connection.

Network Operator: The name of the Mobile Network Operator (MNO).

Signal Strength (RSRP): The strength of the cellular signal, measured in dBm. Higher absolute values indicate a stronger signal, for example: -80 dBm is a stronger signal than -90 dBm.

SNR: Signal to Noise Ratio. A ratio of signal power to noise power expressed in decibels. SNR is a positive value, and higher numbers are better.

Roaming: Indicates whether roaming is on.

Cell ID (ECGI): E-UTRAN Cell Global Identifier. This is a 15-digit code used to identify cells globally.

Device Info Tab

Use this tab to view details about your internal WAN connection.

The screenshot shows the Inseego FW2000e web interface. The top navigation bar includes the Inseego logo, a signal strength indicator, '5G', a battery icon, and a 'Sign Out' button. The left sidebar contains links for Home, Data Usage, Settings, About (selected), and Support. The main content area is titled 'About' and has sub-tabs for Internet Status, Internet Sessions, Diagnostics, Device Info (selected), GPS, and Logs. Under the 'Device Info' tab, there are two sections: 'General' and 'Software Components'. The 'General' section lists: Manufacturer: Inseego, Model: FW2000e, Device Version: 2N3, and SKU: 649496025427. The 'Software Components' section lists: OS Version: 2.359.0.3, Modem Firmware Version: SDX55MOR-2.41.1 [2021-02-08 22:59:08], Web UI Version: 2.359.0.3, and PRI Version: 165.4.

General

Manufacturer: Inseego.

Model: FW2000e.

Device Version: The version of firmware (software) currently installed.

SKU: The SKU for your FW2000e.

Software Components

OS Version: The version number for the Operating System and its components.


Modem Firmware Version: The version of firmware (software) currently installed for the modem component.

Web UI Version: The version number for the FW2000e Admin Web UI.

PRI Version: The configuration version currently applied to the FW2000e.

GPS Tab

The FW2000e incorporates a GPS receiver. The GPS receiver can determine your current location. Use this tab to view current location information.

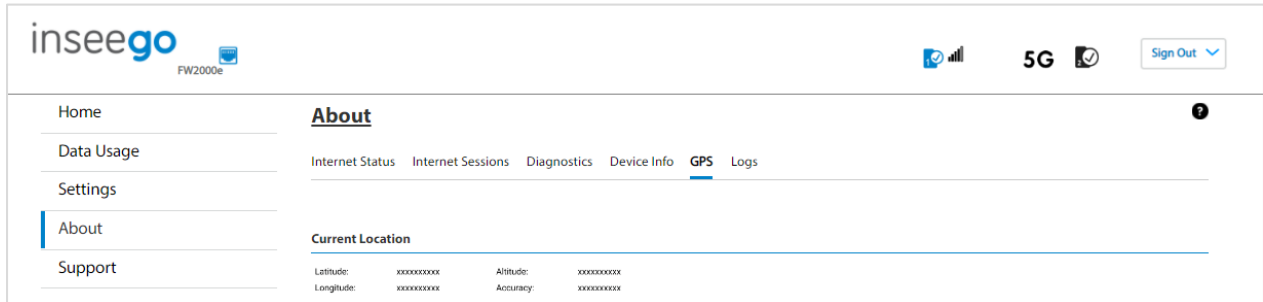

Current Location

Latitude: Latitude for the last location fix.

Longitude: Longitude for the last location fix.

Altitude: Altitude for the last location fix.

Accuracy: A measure of the accuracy of the horizontal position obtained by the GPS receiver.

Logs Tab

Use this tab to view log information for troubleshooting.

The screenshot shows the inseeGO FW2000e interface. At the top left is the logo and model number. On the right, there are status icons for signal strength, 5G, and battery, along with a 'Sign Out' button. A navigation menu on the left lists: Home, Data Usage, Settings, About (selected), and Support. The main content area is titled 'About' and has sub-tabs: Internet Status, Internet Sessions, Diagnostics, Device Info, GPS, and Logs (selected). Under 'Log Settings', there is a 'Turn On Logging' checkbox which is checked, and an 'Automatically clear logs' dropdown menu set to 'After 3 days'. A note states: 'Note: If the system log is full, then the oldest data is discarded, regardless of this setting.' Below this is a 'Save Changes' button. There are two log categories: 'Mobile Network Log' and 'Device Log'. A scrollable list of log entries is shown, with a 'Refresh' button, a 'Clear Log' button, and an 'Export Logs' button at the bottom.

Log Settings

Turn On Logging: Check this box to turn on logs as needed.

Automatically clear logs: Use the drop-down list to select when logs are cleared. **NOTE:** If the log is full, the oldest data is deleted regardless of this setting.

Click **Save Changes** to enact changes.

If logs are turned on, the following are visible:

Mobile Network Log: This tab displays log data of connections to the mobile network.

Device Log: Displays log data of events other than mobile data connections that occurred on this device.

Refresh: Updates the displayed log data.

Clear Log: Deletes all existing log data. This makes new data easier to read.


Export Logs: Allows you to export log data.

Getting Support

To view the Customer Support page, select **Support** from the side menu. The Customer Support page appears.

Customer Support Page

Use the Customer Support page to access documentation and support information for your FW2000e.

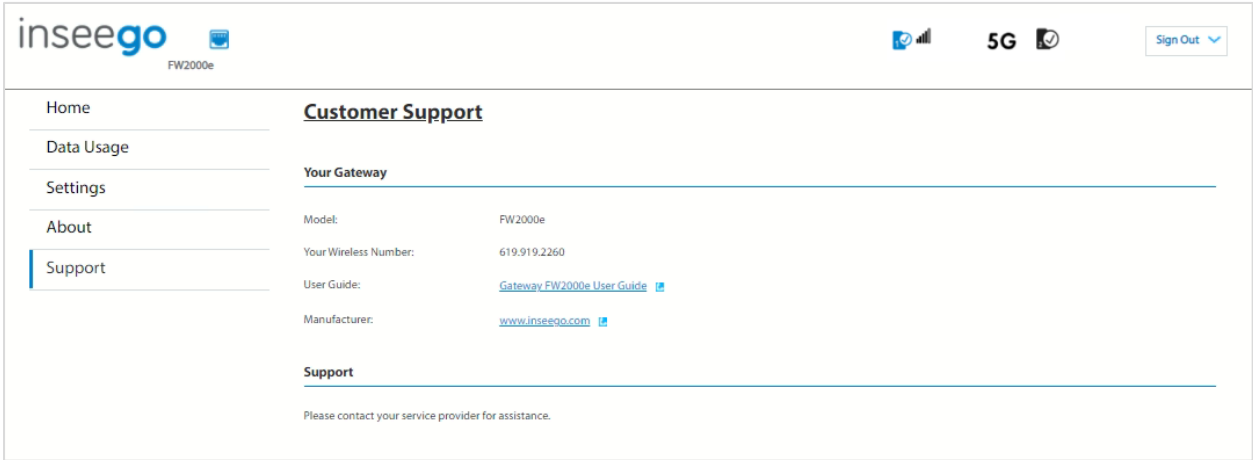

3

Troubleshooting and Support

Overview

Replacing your SIM Card

Indicator LED

Resetting your Device

Technical Support

Overview

This chapter provides troubleshooting and support information, including instructions on replacing a SIM card, information on the indicator LED, and how to reset your device.

Replacing your SIM Card

A SIM card is a small rectangular plastic card that stores your phone number and important information about your wireless service. A SIM card is installed in your FW2000e during the technician installation process. These instructions are for replacing your SIM card.


The FW2000e supports only Nano SIM cards.




CAUTION! Always use a factory-made SIM card supplied by the service provider. Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

To replace the SIM card:

- Disconnect the PoE cable to the FW2000e from the **Data & Power Out** port on the PoE power injector.
- Unscrew the protective shield over the SIM slots using a Phillips-head screwdriver.

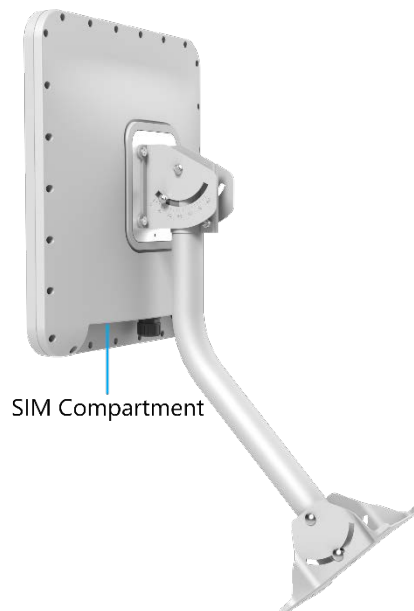

- Use the SIM end of the provided SIM tool to remove the existing SIM card.

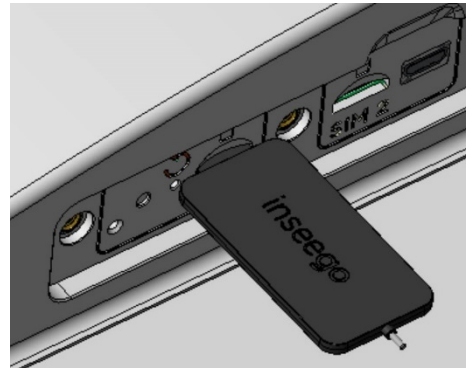

- If necessary, remove the new SIM card from the protective sleeve, being careful not to touch the gold colored contacts.
- Use the SIM end of the provided SIM tool to insert the SIM card into the appropriate SIM slot with the gold-colored contact points facing the front of the device. **NOTE:** Be careful to not use excessive force.
- Reattach the protective shield cover to a torque of .3Nm (.221 ft/lb), making sure the tether passes through the hole of the rear housing and is not bent or bunched.



Correct tether placement



Incorrect tether placement


WARNING! If the tether is bunched, it could prevent the compartment from being effectively sealed.

- Insert the PoE cable to the FW2000e back into the **Data & Power Out** port on the PoE power injector.

NOTE: If there is an issue, check the indicator LED (see Indicator LED on the next page) to make sure the SIM is working correctly. Should a SIM card be lost or damaged, contact your network operator.

Indicator LED

There is a multifunction LED located on the FW2000e device in the SIM compartment (visible through the protective shield). It changes colors and either blinks or glows solid to communicate current states for the device.

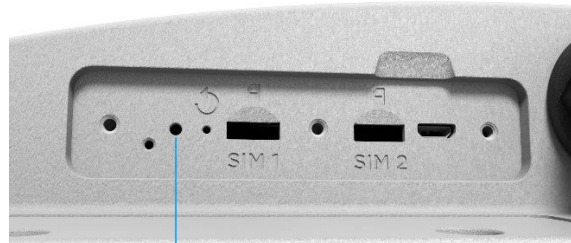

Multifunction LED

LED Color	Operation	Meaning
Blue*	Solid	Strong 5G connection (3 – 5 bars)
	Blinking	Weak 5G connection (1 – 2 bars)
Green*	Solid	Strong 4G connection (3 – 5 bars)
	Blinking	Weak 4G connection (1 – 2 bars)
Yellow	Solid	Software update is in progress
Red	Solid	CPE is booting up, acquiring signal
	Blinking	No service, SIM error, or locked SIM card

* If you are unable to browse the internet, contact your service provider to check the status of the SIM and troubleshoot any APN issues.

Common Problems and Solutions

The solutions in this section can help solve many common problems encountered while using the FW2000e.

Indicator LED is blue or green/SIM appears active, but I cannot browse the internet

- **Reason:** When there is a SIM or APN issue, some service providers let you connect and provide an IP address, but you are not able to browse the internet.

Solution: Contact your service provider to check the status of the SIM and troubleshoot any APN issues.

I cannot access the Admin Web UI

- **Reason:** It is not possible to connect to the Web UI through a router.

Solution: Your computer must be directly connected by Ethernet cable to the Data In port on the FW2000e PoE power injector.

- **Reason:** You need a valid WAN connection to access the Web UI using <http://192.168.1.1>.

Solution: If you are unable to connect to <http://192.168.1.1>, use <http://inseego.local/>.

NOTE: This local address relies on having IPv6 enabled on your connecting device.

My connecting device is not obtaining a valid IP address

There are several possible reasons your connecting device is not obtaining a valid IP address:

- **Reason:** You need a valid WAN connection to obtain an IP address. Because IP Passthrough (IPPT) is enabled by default, if there is no WAN connection, no device can obtain the IP address assigned by the mobile network.

Solution: Use <http://inseego.local/> to access the Web UI and troubleshoot your WAN connection.

- **Reason:** You have connected a second device to your FW2000e without restarting. Because IP Passthrough (IPPT) is enabled by default, only the first device detected can obtain the IP address assigned by the mobile network.

Solution: Any time you switch the device you are connecting to the FW2000e, you must first disconnect the existing connected device and power cycle the FW2000e before connecting the new device. Inseego recommends unplugging the PoE power injector from the outlet for 10 seconds.

NOTE: You can disable IPPT on **Settings > Advanced > LAN** or through Inseego Connect.

- **Reason:** The DHCP server has been turned off.
If IPPT is not enabled, the DHCP server provides IP addresses. If the DHCP server is turned off, no IP addresses can be provided.

Solutions:

Reset your FW2000e to factory settings, see “Resetting your Device” on page 58.

or

Use Inseego Connect or Inseego Mobile App LAN settings to turn the DHCP server on.

- **Reason:** The DHCP server has used all of its IP addresses.
This is unlikely to happen with the FW2000e, but if you have disabled IPPT and connected a succession of devices to your FW2000e in a short period of time, you may have used up all of the IP address available.

Solution: Disconnect your connected device and power cycle the FW2000e before reconnecting a device.

- **Reason:** There is an issue with your FW2000e.

Solution: Contact your reseller for assistance.

Resetting your Device

You can reset your FW2000e to factory settings using the RESET button on the device or from the Mobile App, Admin Web UI, or Inseego Connect.


CAUTION! Resetting returns your FW2000e to factory settings, including the Admin password.

Resetting with the RESET Button


The master reset button is in a small hole located in the SIM compartment on the bottom of the FW2000e device. This button returns the device to factory settings, including resetting the Admin password.

To reset the FW2000e from the RESET button:

1. Unscrew the protective shield over the SIM compartment using a Phillips-head screwdriver.

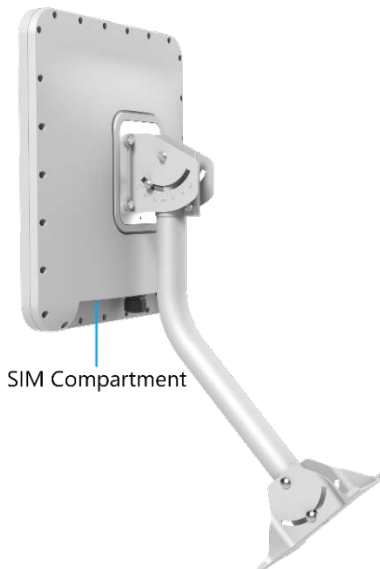

1. Place the RESET end of the provided SIM tool (or one end of an unfolded paper clip) into the master reset button hole.

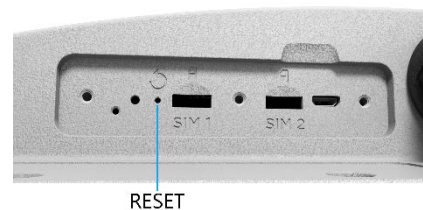

2. Press for five to six seconds, then your FW2000e will restart.
3. Check the indicator LED (see Indicator LED on the previous page) to make sure the FW2000e is working correctly.

4. Reattach the protective shield cover to a torque of .3Nm (.221 ft/lb), making sure the tether passes through the hole of the rear housing and is not bent or bunched.



Correct tether placement



Incorrect tether placement

WARNING! If the tether is bunched, it could prevent the compartment from being effectively sealed.

Resetting from the Inseego Mobile App

To reset the FW2000e from the Inseego Mobile App, select **Mobile Options**, then select **Factory Reset**.

Resetting from the Admin Web UI

To reset the FW2000e from the Admin Web UI, select **Settings > Backup and Restore** and select **Restore Factory Defaults**.

Resetting from Inseego Connect

To reset the FW2000e from Inseego Connect, on the Devices page, check the box next to the device and select **Factory Reset**.

Setting up CBRS

If you want to use your FW2000e on Citizens Broadband Radio Service (CBRS) Band 48, type <http://inseego.local/cbsd> * in your browser to access the setup page. The initial sign in password is: "Fast5G!"

The screenshot shows the 'inseeo FW2000e' web interface. At the top right is a 'Sign Out' button with a dropdown arrow. The main content is divided into several sections:

- Registration Status:** Shows 'Current Status: Not Registered' and a grayed-out 'Register Device' button.
- SAS Information:** Includes fields for Operator (Federated Wireless), URL (https://sc.federatedwireless.com), Version (v1.2), and CBSD User ID (EXAMPLE). A 'Save SAS Information' button is at the bottom.
- CPI Information:** Includes fields for User ID (EXAMPLE), Name (EXAMPLE), and Private Key (No file selected with a 'Browse' button). A 'Save CPI Information' button is at the bottom.
- Certificates:** Includes fields for Certificate, CA Certificate, Private Key, and Passphrase for Private Key (EXAMPLE). Each file field has a 'Browse' button. An 'Upload Certificates' button is at the bottom.
- Antenna Information:** Includes fields for Antenna Azimuth (90) and Antenna Downtilt (10). A 'Save Antenna Information' button is at the bottom.

Registration Status

Current Status: Displays whether the FW2000e is registered or not.

The **Register Device** button remains grayed out until all fields in the SAS Information and Certificates sections are filled out (according to the validation requirements listed below). The CPI Information section is only required if a Private Key is uploaded.

* This URL relies on having IPv6 enabled on your connecting device.

SAS Information

Operator: Enter the name of the SAS provider.

URL: Enter the URL or IP address for the SAS provider. **NOTE:** It is not necessary to include **http://** or **https://**.

Version: The SAS version (currently, only v1.2 is supported).

CBSD User ID: Enter the CBSD User ID supplied by the SAS provider.

Click **Save SAS Information**.

CPI Information

This section is not necessary for registration. If you upload a private key, then you must fill out **User ID** and **Name**.

User ID: If you upload a private key, enter the CPI (Certified Professional Installer) ID.

Name: If you upload a private key, enter the name associated with the key.

Private Key: If desired, upload a CPI .key file obtained from the SAS.

If you filled out this section, click **Save CPI Information**.

Certificates

Certificate: Upload the FW2000e certificate .pem file (CPE-CBSD device certificate & sub-CA).

CA Certificate: Upload the CA certificate .pem file.

Private Key: Upload the FW2000e.key file. (CPE-CBSD device certificate private key).

Passphrase for Private Key: Enter the password for the private key, if any. **NOTE:** This is optional for some SAS providers.

Click **Upload Certificates**.

Antenna Information

Antenna Azimuth (in degrees): Enter the antenna azimuth value (valid entries are between 0 and 359 degrees).

Antenna Downtilt (in degrees): Enter the antenna downtilt value (valid entries are between -90 and +90 degrees).

Click **Save Antenna Information**.

When you have filled out and saved the required sections, click the **Register Device** button to register your FW2000e. **Current Status** information updates when the device is registered. **NOTE:** Once the device is registered, this page is read-only. If you need to make changes, click on the **De-Register** button.

Technical Support

IMPORTANT: Before contacting Support, be sure to restart both your computer and your FW2000e device.

Customer Service and Troubleshooting

Contact your reseller for assistance.

More Information

Documentation for your FW2000e is available online. Go to www.inseego.com/support-documentation. Or, from the Admin Web UI, select **Support**.

4

Product Specifications and Regulatory Information

Product Specifications

Regulatory Information

Product Certifications and Supplier's Declarations of Conformity

Wireless Communications

Limited Warranty and Liability

Safety Hazards

Product Specifications

Device

Name:	5G Outdoor CPE
Model:	FW2000
Standards/Approvals/Certifications:	FCC, GCF, PTCRB CE/ISED/MIC/RCM-ACMA* Bluetooth SIG
Device Testing:	WEEE, RoHS, REACH
Dimensions:	430mm x 400mm x 71.7mm (16.9" x 15.75" x 2.8")
Weight:	4.22 kg (9.3 lbs)
Ports:	1 x 5Gbps Ethernet LAN Port
SIM:	Dual SIM, 2 x 4FF Nano SIM Slots Multi-carrier support with automatic switching
Chipset:	Qualcomm® Snapdragon™ SDX55
LED:	Power and Status
Power:	Power over Ethernet (PoE)
Web UI OS Support:	Windows 10 and later MacOS 10.14 and later Linux® Ubuntu 18.04 LTS and later
High-Gain Antennas:	14dBi: 3.3GHz - 4.2GHz 12dBi: 1.7GHz - 2.7GHz 5dBi: 1.5GHz 0-4dBi: 600MHz - 1.0GHz

Environmental

Operating Temperature: -30°C to 70°C (-22 to 158°F)

IP67 rating for water and dust ingress protection

Internal heating element for startup and operation in cold environments

NOTE: The PoE injector is an indoor device and considered support equipment. It can operate at a maximum temperature of 35°C (95°F).

* Certification schedules dependent on customer launch requirements.

Network Connectivity*

5G NR Sub6

4G LTE CAT 22

4x4 MIMO Sub6

256 QAM Sub6

Security

Inseego Secure™ Compatible

3rd Party Cybersecurity Penetration Testing Verified

Security Hardened Web Interface

Password Hash

Session Timeout

Incorrect Password Lockout

Anti CSRF

* Data plan required. Coverage subject to network availability.

Regulatory Information

Federal Communications Commission Notice (FCC – United States)

FCC ID: PKRISGF2000

Electronic devices, including computers and wireless modems, generate RF energy incidental to their intended function and are therefore subject to FCC rules and regulations.

This equipment has been tested to, and found to be within the acceptable limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment.

This equipment generates radio frequency energy and is designed for use in accordance with the manufacturer's user manual. However, there is no guarantee that interference will not occur in any particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

This device complies with Part 15 of the Federal Communications Commission (FCC) Rules. Operation is subject to the following two conditions.

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: DO NOT ATTEMPT TO SERVICE THE WIRELESS COMMUNICATION DEVICE YOURSELF. SUCH ACTION MAY VOID THE WARRANTY. THIS DEVICE IS FACTORY TUNED. NO CUSTOMER CALIBRATION OR TUNING IS REQUIRED. CONTACT INSEEGO CORP TECHNICAL SUPPORT FOR INFORMATION ABOUT SERVICING YOUR WIRELESS COMMUNICATION DEVICE.

FCC CAUTION: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

MODIFICATIONS: The FCC requires that you be notified that any changes or modifications made to this device that are not expressly approved by Inseego Corp. may void your authority to operate the equipment.

NOTE: The Radio Frequency (RF) emitter installed in your modem must not be located or operated in conjunction with any other antenna or transmitter, unless specifically authorized by INSEEGO CORP.

Innovation, Science and Economic Development Notice (ISED – Canada)

IC: 3229A-FW2000

ISED RSS-Gen Notice

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Canada ICES-003 Compliance

CAN ICES-3 (B)/NMB-3(B)

FCC RF Exposure Guidance Statement

In order to comply with FCC RF Exposure requirements, this device must be installed to provide at least 38cm separation from the human body at all times.

Afin de se conformer aux exigences d'exposition RF FCC / ISED, cet appareil doit être installé pour fournir au moins 38cm de séparation du corps humain en tout temps.



Inseego Corp. declares that FW2000 is in Compliance with the Radio Equipment Directive 2014/53/EU, its essential requirements and other relevant provisions of the directive.

A full copy of the EU declaration of conformity is available at the following internet address:
<https://www.inseego.com/support/>.

The Declaration of Conformity may be also consulted at Inseego Corp., 9710 Scranton Rd., Suite 200 San Diego, USA.

RF Radiation Exposure Guidance Statement

This device must be installed to provide at least 38 cm separation from the human body at all times.

Radio Frequency and Transmitted Output Power Information

Band	Max Power	Frequency
BAND 1	24 dBm	1920-1980 MHz
BAND 3	24 dBm	1710-1785 MHz
BAND 7	24 dBm	2500-2570 MHz
BAND 8	24 dBm	880-915 MHz
BAND 20	24 dBm	832-862 MHz
BAND 28	24 dBm	703-748 MHz
BAND 38	24 dBm	2570-2620 MHz
BAND 40	24 dBm	2300-2400 MHz
BAND 41	24 dBm	2496-2690 MHz
BAND 42	24 dBm	3400-3600 MHz
BAND 43	24 dBm	3600-3800 MHz
FR1 n1	24 dBm	1920-1980 MHz
FR1 n3	24 dBm	1710-1785 MHz
FR1 n7	24 dBm	2500-2570 MHz
FR1 n8	24 dBm	880-915 MHz
FR1 n20	24 dBm	832-862 MHz
FR1 n28	24 dBm	703-748 MHz
FR1 n38	24 dBm	2570-2620 MHz
FR1 n40	24 dBm	2300-2400 MHz
FR1 n41	24 dBm	2496-2690 MHz
FR1 n77	24 dBm	3300-4200 MHz
FR1 n78	24 dBm	3300-3800 MHz
Bluetooth	3 dBm	2400-2483.5 MHz



Product Certifications and Supplier's Declarations of Conformity

Product Certifications and Supplier's Declarations of Conformity documentation may be consulted at Inseego Corp., 9710 Scranton Road Suite 200, San Diego CA 92121, USA.

<https://www.inseego.com/support/>.

Energy Efficiency

Efficiency performance is based on the U.S. Department of Energy Federal Energy Conservation Standards for Battery Chargers.

Energy efficiency terms - the energy efficiency values are based on the following conditions:

- **Power adapter, no-load:** Condition in which the FW2000e power adapter is connected to AC power, but not connected to device.
- **Power adapter efficiency:** Average of the FW2000e power adapter with the measured efficiency when tested at 100 percent, 75 percent, 50 percent, and 25 percent of the power adapter's rated output current.

Mode	Power Consumption for FW2000e	
	115V	230V
Power adapter, no load	<0.21W	<0.21W
Power adapter efficiency	>88%	>88%

Wireless Communications

IMPORTANT: Due to the transmission and reception properties of wireless communications, data occasionally can be lost or delayed.

This can be due to the variation in radio signal strength that results from changes in the characteristics of the radio transmission path. Although data loss is rare, the environment where you operate the modem might adversely affect communications.

Variations in radio signal strength are referred to as fading. Fading is caused by several different factors including signal reflection, the ionosphere, and interference from other radio channels.

Inseego Corp. or its partners will not be held responsible for damages of any kind resulting from the delays or errors in data transmitted or received with the FW2000e device, or failure of the FW2000e device to transmit or receive such data.

SURGE WARNING: If the FW2000e endures significant interference from the environment, disconnection may occur on the cellular network or Bluetooth. This is due to a circuit-protection design feature that reboots the device to avoid potential damage. If you experience this disruption, please ensure all wireless links are re-established.

Limited Warranty and Liability

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE (OR BY COUNTRY OR PROVINCE). OTHER THAN AS PERMITTED BY LAW, INSEEGO CORP DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE, INCLUDING THOSE THAT MAY ARISE FROM THE A PARTICULAR SALES CONTRACT.

INSEEGO CORP warrants for the 12-month period (or 24-month period if required by statute where you purchased the Product) immediately following your receipt of the Product that the Product will be free from defects in material and workmanship under normal use. TO THE EXTENT PERMITTED BY LAW, THESE WARRANTIES ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The exclusive remedy for a claim under this warranty shall be limited to the repair or replacement, at INSEEGO CORP'S option, of defective or non-conforming materials, parts, components or the device. The foregoing warranties do not extend to (I) non conformities, defects or errors in the Products due to accident, abuse, misuse or negligent use of the Products or use in other than a normal and customary manner, environmental conditions not conforming to INSEEGO CORP'S specification, of failure to follow prescribed installation, operating and maintenance procedures, (II) defects, errors or nonconformities in the Product due to modifications, alterations, additions or changes not made in accordance with INSEEGO CORP'S specifications or authorized by INSEEGO CORP, (III) normal wear and tear, (IV) damage caused by force of nature or act of any third person, (V) shipping damage, (VI) service or repair of Product by the purchaser without prior written consent from INSEEGO CORP, (VII) products designated by INSEEGO CORP as beta site test samples, experimental, developmental, reproduction, sample, incomplete or out of specification Products, or (VIII) returned products if the original identification marks have been removed or altered. There is no warranty that information stored in the Product will be retained following any Product repair or replacement.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, INSEEGO CORP IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY.

THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS. SOME STATES (COUNTRIES AND PROVINCES) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Safety Hazards

Do not operate the FW2000e in an environment that might be susceptible to radio interference resulting in danger, specifically:

Areas where prohibited by the law

Follow any special rules and regulations and obey all signs and notices. Always turn off the host device when instructed to do so, or when you suspect that it might cause interference or danger.

Where explosive atmospheres might be present

Do not operate your device in any area where a potentially explosive atmosphere might exist. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Be aware and comply with all signs and instructions.

Users are advised not to operate the device while at a refueling point or service station. Users are reminded to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. Potential locations can include gas stations, below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Near medical and life support equipment

Do not operate your device in any area where medical equipment, life support equipment, or near any equipment that might be susceptible to any form of radio interference. In such areas, the host communications device must be turned off. The device can transmit signals that could interfere with this equipment.

On an aircraft, either on the ground or airborne

In addition to FAA requirements, many airline regulations state that you must suspend wireless operations before boarding an airplane. Please ensure that the CPE is turned off prior to boarding aircraft in order to comply with these regulations. The CPE can transmit signals that could interfere with various onboard systems and controls.

While operating a vehicle

The driver or operator of any vehicle should not operate a wireless data device while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some countries, operating such communications devices while in control of a vehicle is an offense.

Electrostatic Discharge (ESD)

Electrical and electronic devices are sensitive to electrostatic discharge (ESD). Macintosh native connection software might attempt to reinitialize the device should a substantial electrostatic discharge reset the device. If the software is not operational after an ESD occurrence, then restart your computer.

5

Glossary

Glossary

- **4G LTE**—Fourth Generation Long Term Evolution. LTE is a standard for wireless data communications technology and an evolution of the GSM/UMTS standards. The goal of LTE is to increase the capacity and speed of wireless data networks using new DSP (digital signal processing) techniques and modulations that were developed around the turn of the millennium. A further goal is the redesign and simplification of the network architecture to an IP-based system with significantly reduced transfer latency compared to the 3G architecture. The LTE wireless interface is incompatible with 2G and 3G networks, so that it must be operated on a separate wireless spectrum
- **5G**—Fifth Generation. The successor to 4GLTE technology, offering greater bandwidth and higher download speeds. In addition to serving cellular networks, 5G networks can be used as internet service providers, competing with other ISPs. 5G also opens up new IoT and M2M possibilities. Wireless devices must be 5G enabled to use 5G networks.
- **802.11 (a, b, g, n, ax)** — A set of WLAN Wi-Fi communication standards in the 2.4 and 5 GHz frequency bands.
- **APN** — Access Point Name. The name of a gateway between a mobile network and another computer network, often the Internet.
- **bps** — Bits per second. The rate of data flow.
- **Broadband** — High-capacity high-speed transmission channel with a wider bandwidth than conventional modem lines. Broadband channels can carry video, voice, and data simultaneously.
- **CHAP** — Challenge Handshake Authentication Protocol. Protocol used in conjunction with Point to Point Protocol (PPP) to provide security and authentication to users of remote resources. CHAP does not use username/password, but uses a challenge method for authentication. Initiator sends a logon request to the server. The server sends back a challenge to the client. The challenge is encrypted and sent back to the server. The server compares the value from the client, and if it matches, allows the session. If the compare fails, the session is denied and the request restarts.
- **DHCP** — Dynamic Host Configuration Protocol. Software found in servers and routers that automatically assigns IP addresses and other configuration data to computers, tablets, printers, and other devices connection to the IP network.
- **DHCP Server** — A server or service with a server that assigns IP addresses.
- **DMZ** — demilitarized zone. A sub-network that contains and exposes an organization's external-facing services to an untrusted network, usually a larger network such as the Internet.
- **DNS** — Domain Name System. A system for converting host names and domain names into IP addresses on the Internet or on local networks that use the TCP/IP protocol.

- **ECGI** —E-UTRAN Cell Global Identifier. A 15-digit code used to identify cells globally. It is constructed from the Mobile Country Code (MCC), Mobile Network Code (MNC), and the E-UTRAN Cell Identifier (ECI).
- **Firmware** — A computer program embedded in an electronic device. Firmware usually contains operating code for the device.
- **FTP** — File Transfer Protocol. A standard network protocol used to transfer computer files between a client and server.
- **GB** — Gigabyte. A multiple of the unit byte for digital information storage. Usage depends on context. When referring to disk capacities it usually means 10^9 bytes. It also applies to data transmission quantities over telecommunication circuits.
- **Gbps** — Gigabits per second. The rate of data flow.
- **Hotspot** — A Wi-Fi (802.11) access point or the area covered by an access point. Used for connecting to the Internet.
- **HTTP**—Hypertext Transfer Protocol. An application-level protocol for accessing the World Wide Web over the Internet.
- **IEEE** — Institute of Electrical and Electronics Engineers. An international technical/professional society that promotes standardization in technical disciplines.
- **IMAP** — Internet Message Access Protocol. An Internet standard protocol for accessing email from a remote server from email clients. IMAP allows access from multiple client devices.
- **IMEI**— International Mobile Equipment Identity. Used in LTE networks to identify the device. It is usually printed on the device and can often be retrieved using a USSD code.
- **IMSI** —International Mobile Subscriber Identity. A unique number, usually fifteen digits, that identifies a Global System for Mobile Communications (GSM) subscriber.
- **IoT**—Internet of things. An expansion of the internet and network connections to sensors and devices (things) allowing simple objects, such as light fixtures and locks, a higher degree of computing and analytical capabilities. IoT enables connected devices (things) to gather and share data from their environment with other devices and networks with the need for little or no human interaction.
- **IP** — Internet Protocol. The mechanism by which packets are routed between computers on a network.
- **IP type** — The type of service provided over a network.
- **IP address**—Internet Protocol address. The address of a device attached to an IP network (TCP/IP network).
- **ISP**— Internet Service Provider. Also referred to as the service carrier, an ISP provides Internet connection service (See Network Operator).

- **Kbps** — Kilobits per second. The rate of data flow.
- **LAN** — Local Area Network. A type of network that lets a group of computers, all in close proximity (such as inside an office building), communicate with one another. It does not use common carrier circuits though it can have gateways or bridges to other public or private networks.
- **M2M**— Machine to machine. Direct communication between devices. This may include wired or wireless communication.
- **MAC Address**—Media Access Control. A number that uniquely identifies each network hardware device. MAC addresses are 12-digit hexadecimal numbers. This is also known as the physical or hardware address.
- **Mbps** — Megabits per second. The rate of data flow.
- **MNO** — Mobile Network Operator. The vendor that provides your wireless access. Known by different names in different regions, some examples are: wireless provider, network provider, or cellular carrier.
- **MSID** — Mobile Station IDentifier. A number for a mobile phone that identifies that phone to the network.
- **Network Operator**—The vendor that provides your wireless access. Known by different names in different regions, some examples are: wireless provider, network provider, or cellular carrier.
- **Network Technology**—The technology on which a particular network provider’s system is built; such as LTE or GSM.
- **NNTP** — Network News Transfer Protocol. The primary protocol used to connect to Usenet servers and transfer news articles between systems over the Internet.
- **PAP** — Password Authentication Protocol. A protocol used by Point to Point Protocol (PPP) to validate users. PAP does not encrypt data and sends the password and username to the authentication server as plain text. Most network operating system remote servers support PAP.
- **PCI** — Physical Cell ID. Each PCI corresponds to one 5G NR cell or LTE cell and consists of two parts: PSS Primary Synchronization Signal (PSS) and Secondary Synchronization Signal (SSS).
- **POP3** — Post Office Protocol 3. A protocol in which email is received and held for you by your Internet server until you download it.
- **Port** — A virtual data connection used by programs to exchange data. It is the endpoint in a logical connection. The port is specified by the port number.
- **Port Forwarding** — A process that allows remote devices to connect to a specific computer within a private LAN.
- **Port Number** — A 16-bit number used by the TCP and UDP protocols to direct traffic on a TCP/IP host. Certain port numbers are standard for common applications.

- **PRL** — Preferred Roaming List. A list that your wireless phone or device uses to determine which networks to connect with when you are roaming (Network operator specific).
- **Protocol** — A standard that enables connection, communication, and data transfer between computing endpoints.
- **Proxy** — A firewall mechanism that replaces the IP address of a host on the internal (protected) network with its own IP address for all traffic passing through it.
- **Router** — A device that directs traffic from one network to another.
- **RSRP** – Reference Signal Receive Power. An LTE-specific measure of signal strength, similar to RSSI, but RSRP measures lower than RSSI due to the method of calculation.
- **RSRQ** – Reference Signal Received Quality. A calculated value from RSRP and RSSI that provides a measure of signal and interference.
- **RSSI** — Received Signal Strength Indicator. An estimated measure of how well a device can hear a signal from an access point or router. RSSI value is pulled from the device’s Wi-Fi card (hence “received” signal strength), so it is not the same as transmit power from an access point or router.
- **SIM** — Subscriber Identification Module. Found in LTE and GSM network technology, the SIM is a card containing identification information for the subscriber and their account. The SIM card can be moved to different devices.
- **SNR** — Signal to Noise Ratio. A ratio of signal power to noise power expressed in decibels. SNR is a positive value, and higher numbers are better.
- **SMTP** — Simple Mail Transfer Protocol. The standard protocol for sending emails across the Internet.
- **SNMP** — Simple Network Management Protocol. An Internet protocol used to manage and monitor network devices and their functions.
- **SNR** — Signal to Noise Ratio. A ratio of signal power to noise power expressed in decibels. SNR is a positive value, and higher numbers are better.
- **SSID** — Service Set Identifier. The name assigned to a Wi-Fi network.
- **TCP/IP**—Transmission Control Protocol/Internet Protocol. The set of communications protocols used for the Internet and other similar networks.
- **TFTP**—Trivial File Transfer Protocol. An Internet software utility for transferring files that is simpler to use than FTP, but does not provide user authentication and directory visibility supported by FTP.
- **Telnet** — A user command and underlying TCP/IP protocol that allows a user on one computer to log into another computer that is part of the same network.

- **TTY**—Text Telephones (TTY), also known as Telecommunications Device for the Deaf (TDD), are used by the deaf, hard-of-hearing, and individuals with speech impairments to communicate.
- **UDP**—User Datagram Protocol (UDP) is a communications protocol that offers a limited amount of service when messages are exchanged between computers in a network that uses the Internet Protocol (IP). UDP is an alternative to the Transmission Control Protocol (TCP) and, together with IP, is sometimes referred to as UDP/IP.
- **USB**—Universal Serial Bus. A connection type for computing device peripherals such as a printer, mobile modem, etc.
- **USB Port Types**—USB ports on computers and hubs have a rectangular Type A port, and peripheral devices have a cable with a Type A connector. Peripheral devices that do not have an attached cable typically have a Type C port on the device and a separate Type A to C cable. Type B connectors have been replaced by Type C. Mini-USB connectors have largely been superseded by Micro-USB, but are still used with some cameras, music players, etc. Micro-USB connectors are used with portable devices, such as phones and battery packs, although USB-C is being adopted by most manufacturers.
- **USSD**—Unstructured Supplementary Service Data (USSD), also known as “Quick code” or “Feature code”, is a communications protocol used to send data between a mobile device and network service provider.
- **VPN**—Virtual Private Network. A secure private network that runs over the public Internet. Commonly used to connect to an office network from elsewhere.
- **Wi-Fi**—Any system that uses the 802.11 standard developed and released in 1997 by the IEEE.
- **Wi-Fi 5**—The fifth generation of Wireless Fidelity, using 802.11ac on 5 GHz. This standard was developed and released in 2013.
- **Wi-Fi 6**—The sixth generation of Wireless Fidelity, using 802.11ax on licensed exempt bands between 1 and 6 GHz. This standard was developed in 2020.
- **Wi-Fi Client**— A wireless device that connects to the Internet via Wi-Fi
- **WPA/WPA2**— Wi-Fi Protected Access. A security protocol for wireless 802.11 networks from the Wi-Fi Alliance.
- **WPA3**—The next generation of Wi-Fi Protected Access. WPA3 simplifies security, provides more robust authentication, increased cryptographic strength, and offers additional capabilities for personal and enterprise networks. WPA3 retains interoperability with WPA2 devices.